

Combi Corporation

Joytrip

User Guide

- For safety of your children, please read this user guide carefully before use and use the product accordingly.
- Please keep this user guide underneath the seat base for future reference. (Refer to P.4)



This product is tested and certified according to ECE R44/04.

- Universal: G1,2,3
- Applicable weight: 9-36kg

Before use

Assembly method
Attaching the backrest
(Please refer to page 10)

Using as
Child mode

Using as
Junior mode

Using as
Booster mode

Convert to
Child mode





Care and Maintenance

Before use

Thank you for your purchase of Combi Child Car Seat. Before use, please read this user guide carefully and use your child car seat accordingly.

Child car seat is designed to reduce the injury to the child in case of traffic accident. However, it is not necessarily a guarantee that the seat can completely protect the child from injury.

The caution items mentioned in this user guide are for your reference in order to use this product safely. [Danger], [Warning] and [Caution] labels indicate the potential consequences if the mentioned are not followed properly and are categorized according to the level of severity.

Labels	Contents of the labels.
 DANGER	Improper usage will directly cause death or severe injury.
 WARNING	Improper usage may cause death or severe injury.
 CAUTION	Improper usage may cause injury or damage of the product.
 HINT	It is the recommendation about usage of child car seat and useful hint.

Contents

Before use

P1 ~ P9

Before use	1
Use according to the child's weight	3
Name of parts	3-4
Various types of vehicle safety belts and important notes for installation	5
Inapplicable vehicle seats	6
For safe use of the child car seat	7-9

Assembly method

P10 ~ 12

To attach the backrest	10
To detach the backrest	11
To attach and use the head support and lumbar support (EG only)	11-12

Using as Child mode (9-18kg)

P12 ~ 19

Preparation	12
Adjusting the shoulder belt to fit the child	12-14
Caution during installation	14
Preparation before installation	14
Preparation of the vehicle seat	15
Installation method	16
Secured installation method	17
Check method after installation	17
Seating the child	18-19

Using as Junior mode (15-25kg)

P20 ~ 26

Preparation	20
Switching to Junior mode	20

To detach the baby belt	20-21
To attach and detach the crotch belt	22
To store the baby belt adjustment metal	23
Preparation of the shoulder belt positioner	24
Installing to the car	25
Seating the child	25
To adjust the shoulder belt positioner	26
Check after installation	26

Using as Booster mode (15-36kg)

P27~29

Preparation	27
Mode changing method	27
Installation to the car	27
Seating the child	28
To adjust the shoulder belt positioner	28
Check after installation	29

Converting back to Child mode

P29~31

To store the shoulder belt positioner	29
To attach the baby belt adjustment metal	29-30
To install the baby belt	30-31

Maintenance

P32~33

To attach and detach the seat cover on the backrest	32
Maintenance of the main body and baby belt	33
Washing the seat cover	33




Storage

P33

Storage	33
Product specification	33
Angle checker	Back cover

Use according to the child's weight

This product can be used in 3 different ways according to child's weight.

Mode	Child mode		Junior mode		Booster mode	
Using Method						
Weight condition	9kg~18kg		15kg~25kg		15kg~36kg	
Reference height	70~105cm		95~120cm		95~145cm	
Reference age	1~4 years old		3~7 years old		3~11 years old	
Using method	To install the child car seat on the vehicle seat with the seat belt and secure the child with baby belt.		To detach the baby belt, secure the child with the vehicle seat belt. The shoulder belt positioner should be used to fit the child's shoulder.		To detach the backrest and use the booster seat only. The shoulder belt positioner should be used to fit the child's shoulder.	
Reference page	12		20		27	



DANGER

- The left mentioned applicable age and height is for reference only. If the child fits for the applicable age and height but do not fulfill the weight conditions, please do not use this mode.

Name of parts


Please check all components are available before use.

The simplified illustration here is for easy understanding for customers and there may be a bit different from the actual product.


Sales package

- Main body
- Head support (EG only)
- Lumbar support (EG only)
- Instruction manual (this book)

Head support (EG only)

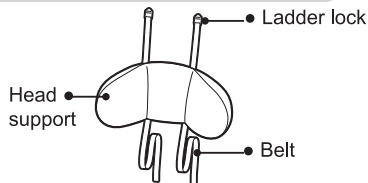

Lumbar support (EG only)

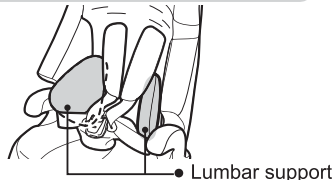


- ※ Head support and lumbar support can be used for child mode and junior mode, please use them according to baby's body size.


Name of parts

Before use


FRONT

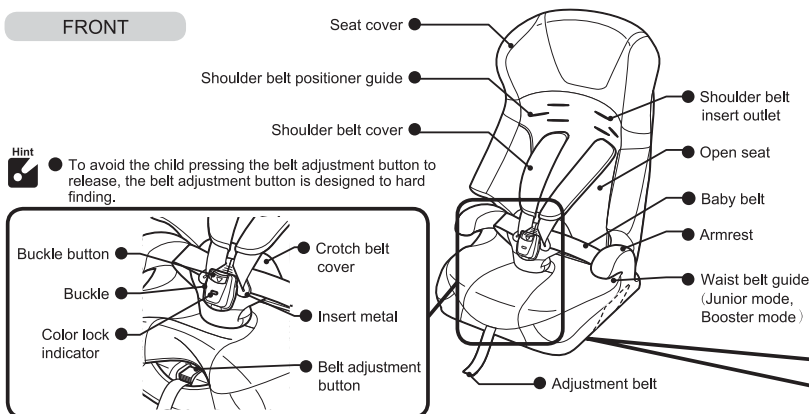


- ① Release the rubber band (2 places) at the front side of the seat
- ② Flip the front side of seat cover.
- ③ Put the instruction manual into the pocket.

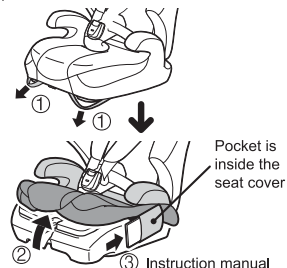

BACK

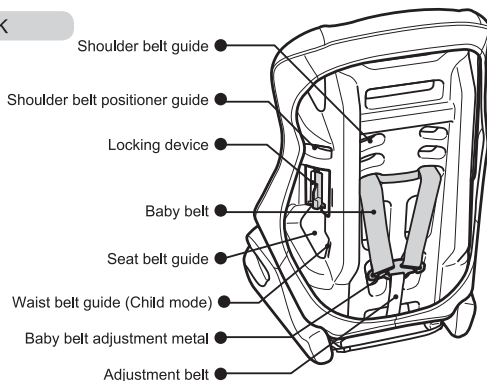

Part names which are frequently used in this book

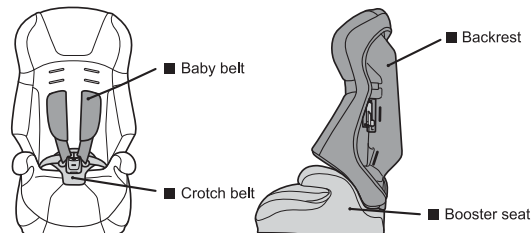


Various types of vehicle safety belts and important notes for installation

Installation method varies according to different types of seat belt. Some cars are unable to install our product. Only suitable if the approved vehicles are fitted with lap / 3 point / static / with retractor safety-belts, approved to UN/ECE Regulation No.16 or other equivalent standards.


2-point seat belt

Refers to the seat belt that secures the body in 2-points, one on each side of the waist.

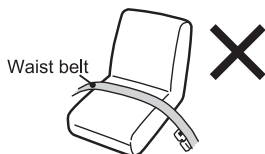

3-point seat belt

Refers to the seat belt that secures the body in 3-points, including left and right of the waist and either side of the shoulders.

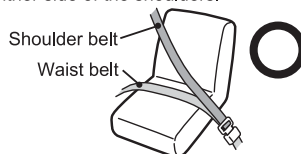

DANGER

- Make sure to install the child car seat onto vehicle seats with 3-point safety belts.
- Do not install it onto seats with 2-point safety belts or it may not function as designed.

Type of seat belt	Characteristics	Child mode	Junior mode / Booster mode
ELR function (Emergency locking retractor)	Extendable normally but locked in sudden retraction.	Slowly pull out the seat belt to install the child car seat.	Slowly pull out the seat belt to install the child car seat.
AELR belt securing function	Belt that will be locked and cannot further extend when it is about to rewind after completely being pulled out.	After installation, pull out vehicle seat belt completely and use locking function.	It is danger if the seat belt is completely pulled out. Resume the seat belt first to disable the belt locking function.
NR function	Seat belt that is not equipped with an automatic rewinding function.	Adjust the length of the vehicle seat belt to co-ordinate with the child car seat, and install on the seat.	Set the seat belt to an appropriate length to fit the child car seat.
NLR function (Non-locking retractor)	Without locking function. Pull out the whole seat belt and adjust the length according to the child.		Not applicable for installation
ALR function (Automatic locking retractor)	Locked upon stops while pulling out the seat belt.		

Inapplicable vehicle seats

Inapplicable vehicle seats

Please do not install this product on unsuitable vehicle seat even though it has not been mentioned below.


- Vehicle seat without a seat belt.



- Vehicle seat with a 2-point seat belt.



- Seat facing rear or sideways against the driving direction.

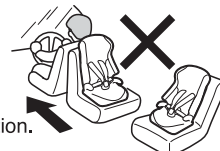

- Seat equipped with a passive seat belt.

※ Passive seat belt refers to seat belt that automatically buckles itself upon sitting.




- Seat equipped with airbag. Seat equipped with only side air bag is applicable.




- The installation length of seat belt less than 32cm


※ The length between the extension point and the buckle of the seat belt.

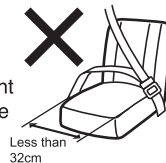


- Seat of the sitting depth is less than 40cm.

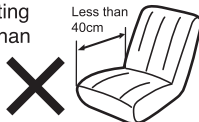

- Vehicle seat with seat belt extending from the center part, seat belt is extending from the middle of the seat where is located in the front of seat belt guide.

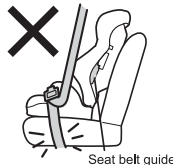



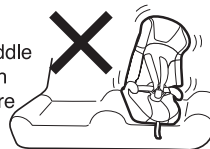




- Seat with a mounted middle portion which cannot secure the child car seat.



For safe use of the child car seat

⚠ DANGER

The following misuses may cause the child car seat to malfunction and lead to danger.

- Do not seat a child who does not satisfy the applicable conditions, or install on a seat which is inapplicable. 
- Never use the child car seat which cannot be secured as stated in this user guide. Please install the child car seat to the other vehicle seats 
- Do not install wrongly. Please install correctly according to user guide or indication stickers on the product. 
- Always fix the child car seat with the vehicle seat belt when installing onto the vehicle. Never use a rope, string or other than seat belt to fix it. 
- Do not install the child car seat on a vehicle seat equipped with air bag. In case of collision, the exploded air bag will expose the child to major impact which is extremely dangerous. Seat equipped with side air-bag is applicable. 
- Do not allow child to stand on the seat. Please make sure the crotch belt are properly installed. The baby belt is well fastened to the buckle and color indicator is shown in green. 
- Make sure the seat belt is properly adjusted after the child is seated. 

⚠ In case of emergency

- In case of emergency, such as accidents, press the button to release the baby belt from the belt buckle, and remove the child from the vehicle seat immediately.



For safe use of the child car seat

! WARNING

The following misuses may cause malfunction to the child car seat and lead to danger.

- Always keep the seat belt fitting tight. Any looseness may get caught around the child's neck and may become the cause of suffocation, or the child may have chance to fall off from the child car seat in accident. Please adjust the baby belt to suitable length. (Refer to P.18)



- Please contact local distributor or retailer in case the belt buckle is malfunction or repairing request.



- The buckle button may be pressed and released accidentally by the child. It is important to check periodically the baby belt is well fastened.



- Do not use the baby belt if any damage is found. Please contact local distributor and retailer for an enquiry.



- Do not install on a vehicle seat of where the seat belt is damaged.



- Structural damage may happen to the product when it is knocked or made to fall from high level. In such case stop using it even if the knock is one-off and no physical damage is seen.



- Do not lift the child car seat when the child is seated.



- Make sure to use the shoulder belt positioner when using as junior mode and booster mode. Otherwise, the shoulder belt may be slipping off the shoulder and cause danger.



- Adjust the shoulder belt positioner to be the same height as the child's shoulder so that the vehicle seat belt fits the child's body. (Please refer to P.26,28)

- When installing on vehicle seat with particular safety car seat retracting function, disable the function first. Otherwise the seat belt may exert pressure on the child's chest. (Refer to P.5)



- Do not leave your child in the vehicle unattended. In hot days the cabin temperature may rise and endanger the child to heat stroke or dehydration. It may also become the cause of accident. An adult should accompany all the time.



- Do not install the child car seat if the gearshift or handbrake affects smooth operation.



- Do not install on a front seat in a 2-door or 3-door vehicle in case it may obstruct passengers from getting out the vehicle in emergency.



- Always fix the child car seat with the seat belt even when it is not in use. Otherwise it may fall off during sudden brakes and may cause disturbance to the driver.



For safe use of the child car seat

⚠ CAUTION

- Exposing the child car seat to direct sunlight will cause the insert metal or other parts to get excessively hot. Always touch and check all parts before seating your child.



- Do not adjust the child car seat while driving. Make sure the child passengers do not play with the child car seat.



- The backrest cannot be used alone.



- Do not use the child car seat as a normal chair. It may have chance to tip over or fall off.



- Make sure the child car seat is not jammed in between the vehicle doors or other movable parts.



- Do not modify the child car seat or handle it in ways not described in this user guide.



- Never let the child use the child car seat alone.



- Seat cushion must be attached when using. Do not replace any parts of child car seat by other things (which may affect proper functions).



- Do not put a piece of cushion in between the vehicle seat and the child car seat.



- Due to the surface material of vehicle seat or shape scratch mark may remain after installation.

- Do not expose the child car seat to windy or rainy environment.



- Do not leave things unsecured in the vehicle. Things may fall off onto the child when the vehicle is in motion.



- Do not lift and carry the child car seat with the baby belt.

- To hold the child car seat as illustrated and pay attention not to let fingers get caught between the joint.



Joint of the backrest and the booster seat

Assembly method

The backrest and the booster seat is detached in the sales package. Please attach the backrest to the booster seat before using as child mode (P.12) and junior mode (P.20).



CAUTION

- Assemble the product on a flat and preferably soft surface to avoid scratching the product or the floor.
- Be careful not to pinch the fingers of people who assemble and people around when assembling the child car seat.
- Easy to carry the assembled child car seat as illustrated and not to get fingers caught between the joint.
- Beware not to trap the baby belt between the backrest and the booster seat.



3


- ① Kneel onto the booster seat.
- ② Hold on the upper side of the backrest with both hands.



Check and make sure belts are not jammed.

4

- ① Snap the backrest onto the seat base by connecting the hooks onto the joint.
- ② Slightly press onto the left and right side of the backrest to insert it into the seat base.

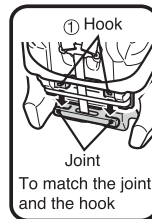


Do not forcibly press onto the backrest.

1

Make sure the baby belt is not twisted and lay the backrest and booster seat down on the floor as illustrated. Set the baby belt properly.


* Fasten the buckle when use in child mode.

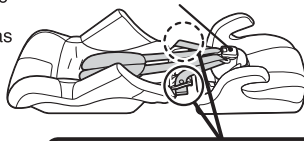

Make sure baby belt is not twisted before assembling the product.

2

Pull up the baby belt and check that the left and right buttons on the belt end are located above the baby belt insert outlets.

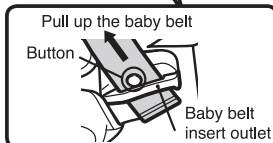

WARNING

- Do not use the product when the baby belt buttons are located below the insert outlets.



Baby belt insert outlet


Button



CAUTION

Check the below before using the product. Otherwise the product may not function as designed and cause danger to child.

- Check and make sure the backrest is firmly attached to the booster seat before seating the child.
- Make sure the baby belt is not routing along the outer side of the armrest when using as child mode.
- Make sure the baby belt is not jammed in between the backrest and booster seat.

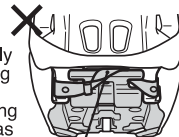

The baby belt is trapped

Assembly method

Please detach the backrest when using as booster mode. (P.27)


To detach the backrest.

- 1 Place the main body onto a flat and soft surface.
Kneel onto the booster seat.



- 2 Hold on the lower side of the backrest with both hands and gradually pull the backrest off the booster seat.

Hint Do not forcibly remove the backrest from the booster seat, remove one side first and then the other.

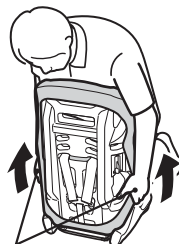

Grab the lower side of the backrest

CAUTION

- Backrest may come off the seat base suddenly when forcibly pulled.

To attach and use the head and lumbar support


Head support and lumbar support can be used in both child mode (P.12) and junior mode (P.20). Please apply according to body size of baby.

CAUTION


- Do not place removed head support or lumbar support inside vehicle cabin. During sudden brake, head support and lumbar support may roll over and affect driving.
- Do not hold on the head support or lumbar support when moving the child car seat. Otherwise the child car seat may fall off by accident and be damaged.
- Follow the instructions mentioned in the user guide to use the head support and lumbar support.

To attach the head support

- 1 ① Pull the belt on the head support through the shoulder belt insert outlets.
② Flip the ladder belt over the backrest to the rear side of seat.

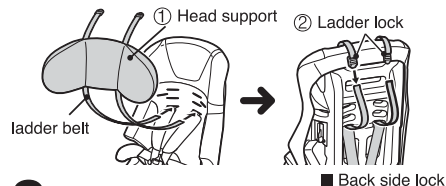

- 2 Fasten the belt onto the ladder.

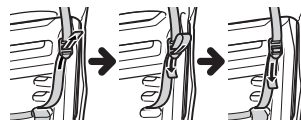


To detach the head support

* Please follow the reverse steps to detach the head support.


Assembly method

To attach the lumbar support

- ① Set the lumbar support in the correct position and direction, and
- ② Flip the open seat.

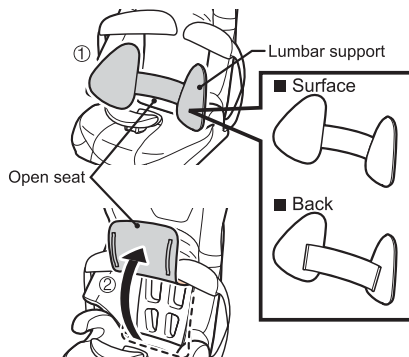

- ③ Check the direction, and then
- ④ Pull the lumbar support through the left and right openings.
- ⑤ Put the open seat into the original position.

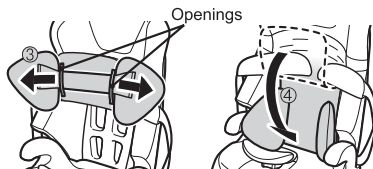

To detach the lumbar support

* Please follow the reverse steps to detach the head support.

Using as Child Mode (9-18kg)

Preparation

Weight	9-18kg
Height	70-105cm
Reference age	1-4 years old
Using method	To secure the child car seat with the vehicle seat belt, and to secure the child with baby belt.



Hint
Junior mode (P.20) and booster mode (P.27) can be use for child who is above 15kg.

Adjusting shoulder belt to fit the child


To select the proper shoulder belt insert outlet according to the child's shoulder height.

To select the appropriate shoulder belt insert outlet. Seat the child and select the appropriate shoulder belt insert outlet.

WARNING

- To use the pair of shoulder belt insert outlet just above the child's shoulder.
- Make sure left and right shoulder belt insert outlet to the seat is in the same level.

To use the pair of shoulder belt insert outlet just above the shoulder.

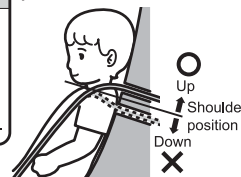

* The crotch belt cannot be adjusted. Please adjust the shoulder belt.

Using as child mode


Using as Child Mode (9-18kg)

Adjust the shoulder belt according to the child's shoulder height.


- 1** Pull out baby belt.
- ① While pressing down the baby belt adjustment button (under the seat cushion)
 - ② Grab the baby belt of both sides and pull them out until the end.
- * Pull the baby belt to adjust, not the shoulder belt cover.




- Hint**
- To avoid the child pressing the buckle button to release, the buckle button is designed to hard pressing.
 - When pushing the belt adjustment button, please make sure to press on the "PUSH" mark.
 - If the baby belt adjustment button is secured tightly, pull the baby belts towards at the same time when pressing on the button.

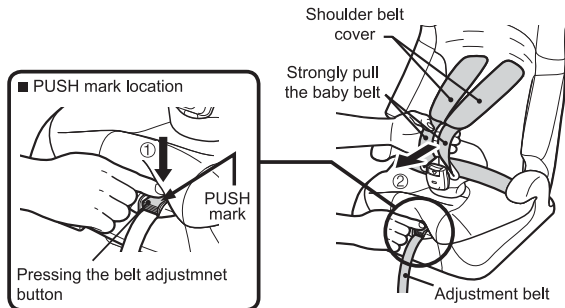

- 2** To detach the baby belt.
- ① Release baby belt from baby belt adjustment metal.
 - ② Pull baby belt out from the shoulder belt cover to the front.
- * You are not be able to release the baby belt by pulling the shoulder belt cover, make sure to pull the baby belt.


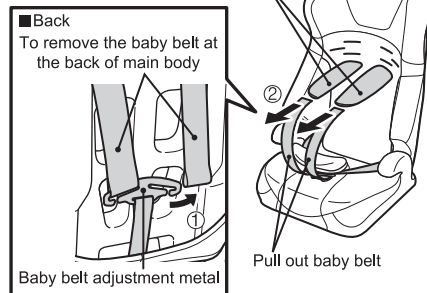


- 3** To change the position of the shoulder belt cover.
- ① Pull out both the left and right shoulder belt covers from the back.
 - ② Insert the shoulder belt covers back to the seat through appropriate shoulder belt insert outlets.
- * Please refer to P.12 "Adjusting shoulder belt to fit the child."

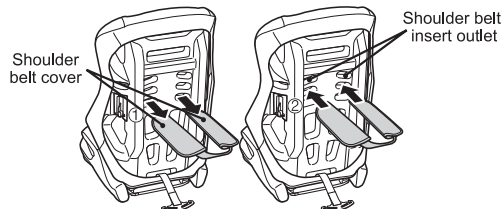

Using as Child Mode (9-18kg)

- 4** Attach the baby belt
- ① Make sure the baby belt is not twisted and put it back into the shoulder belt covers.
 - ② Pull the baby belt out at the back of seat.
 - ③ Attach the baby belt's back to the baby belt adjustment metal.

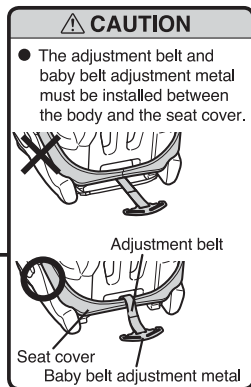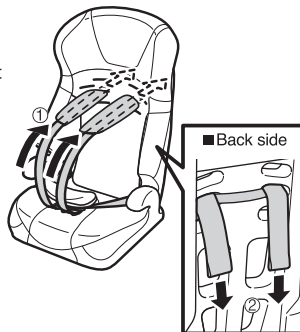

Caution during installation

This section describes the caution during installation and the installation methods.

Our child car seat may not be able to install on particular seat with extra-ordinary seat shape. Please refer to Page 6.

DANGER

- Unsecured child car seat may not function as designed and may cause to danger. In such case, try to install to other seats.
- Always fix the child car seat with vehicle seat belt during installation.
- Do not install the child car seat onto the vehicle seat equipped with an air bag. In case of collision, the exploded air bag will expose the child to major impact which is extremely dangerous.
- * Only install the child car seat to vehicle seat with a side air bag is acceptable.

WARNING

- Do not install on a vehicle seat of where the seat belt is damaged.
- Always secure a child car seat with vehicle seat belt inside the vehicle.
- Do not install the child car seat if the gearshift or hand brake which affects smooth operation.
- Do not install on the front seat of a 2-door or 3-door vehicle in case it may obstruct passengers from getting out the vehicle in emergency.

Preparation before installation

- 1** Park the vehicle on flat ground where both left and right door can be opened completely.



- 2** Slide front seat forward and recline the backrest to the front for easier installation.



Using as Child Mode (9-18kg)



- In case of child mode, if the slide seat function is available, the child car seat can be installed firmly.

- ① Slide seat to the back before installation as child mode.
- ② Slide the seat forward after installation.




Preparation of the vehicle seat

1

- Adjust the vehicle seat to better secure the child car seat.

- ① Remove the headrest of the vehicle seat if it is detachable.
- ② Lower the seat belt if it is adjustable.
- ③ Place the child car seat on the vehicle seat (forward facing)

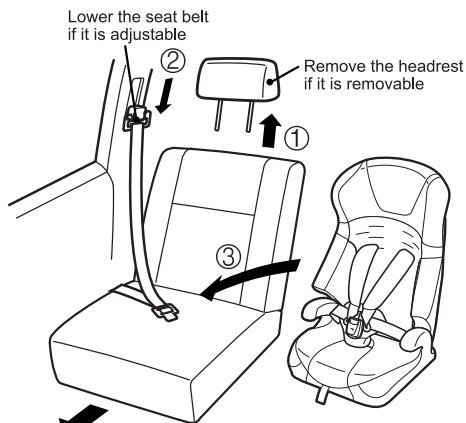


Forward facing
(moving direction of the vehicle)

2


- Adjusting the vehicle seat backrest to fit the child car seat can make the installation more secured.

- Adjust the angle of backrest of vehicle seat if it is an adjustable type so that it fits the main body of child car seat.

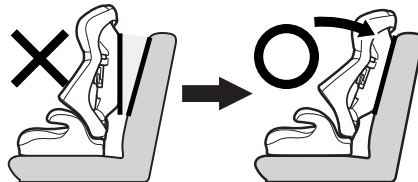

WARNING


- Please adjust the angle of the vehicle seat if it has a reclining function. Set the child car seat with its backrest around 15 degree in line with the vehicle seat backrest.
- * Please use the angle checker on the back cover to confirm the angle.
- It is dangerous to leave too much space between the child car seat and vehicle seat after installation.

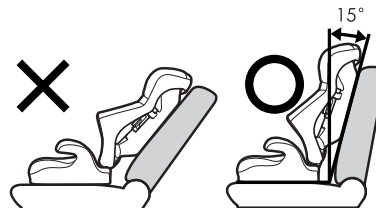

Using as Child Mode (9-18kg)

Installation method


- 1** Secure the vehicle seat belt
 - ① Pull out the vehicle seat belt gradually. Make sure it is not twisted and then
 - ② Pull the vehicle seat belt through the seat belt guide.
 - ③ Flip the open seat and route the seat belt to the back of the child car seat.
 - ④ Route the insert metal accordingly through the waist belt guide on the opposite side of the buckle.
 - ⑤ Fasten the seat belt into the buckle until click sound.

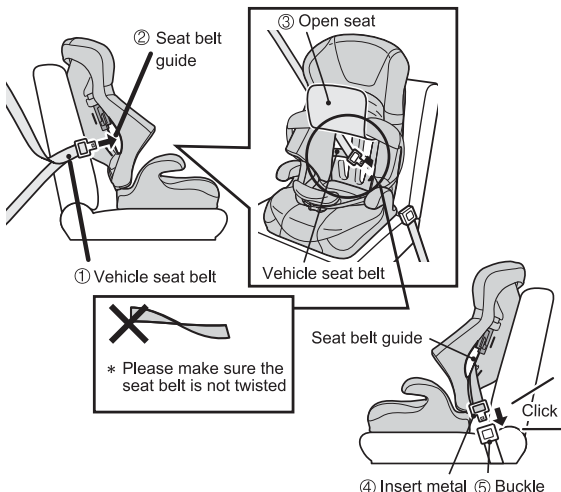

- 2** Secure the shoulder belt
 - ① Open the locking device which is on the opposite side of the buckle
 - ② Clip the shoulder belt into the locking device and press it down to close.




- The locking device can be closed automatically. However, in order to firmly install the shoulder belt, please slightly press the locking device to close.

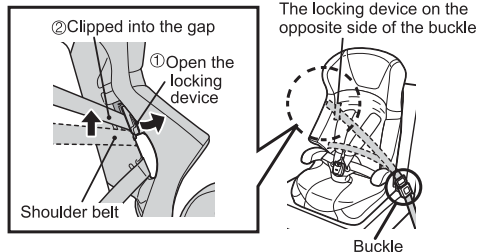

WARNING

- Do not use the locking device on the same side of the buckle.
- Use only the locking device on the opposite side of the buckle.

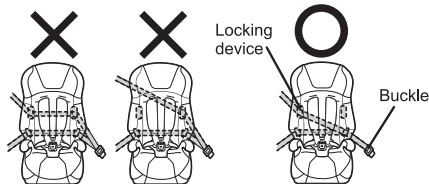

* Please follow the reverse steps to remove the child car seat

To remove the child car seat


Using as Child Mode (9-18kg)

Secured installation method

- 1** Tighten the seat belt as much as possible to secure the child car seat.
- ①** Kneel on the centre of the child car seat and add on body weight onto the vehicle seat.
- ②** Pull up the shoulder belt.
- ③** Strongly pull the shoulder belt (with another hand) to the indicated direction to tighten the shoulder belt.



- Please repeat step ② and ③ while adding your own weight on the child car seat.

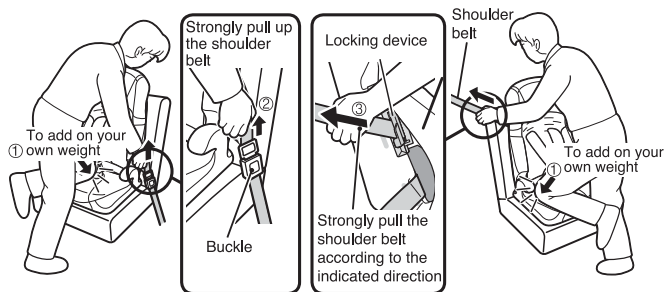


Check after installation

Check the following after each installation.

- ①** There is no gap between the vehicle seat and child car seat.
- ②** Insert metal is fastened to buckle firmly.
- ③** Vehicle seat belt is not too loose nor too tight.
- ④** Check the belt end on the buckle is not loose. (Please refer to the warning on P.18)
- ⑤** Seat belt (waist belt) is passing through the left and right belt guide properly.
- ⑥** The shoulder belt is passing through the locking device on the opposite side of the buckle and locked.
- ⑦** Hold the lower side of the main body and try to push child car seat back and forth to make sure dislocation, if any, should not exceed 3cm.



* Due to the design of the child car seat, the seat may move up and down during use but it is no problem to use.

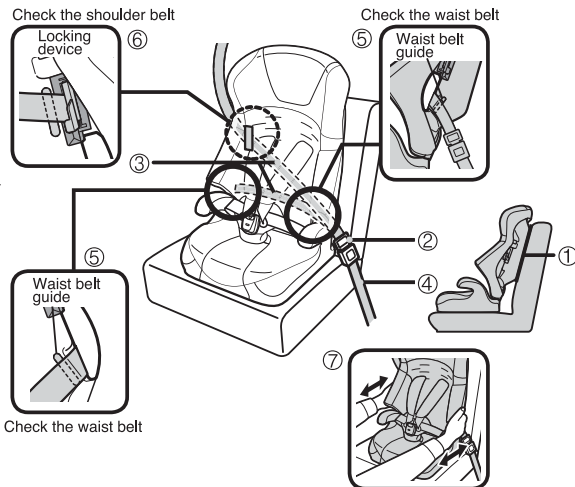

Using as Child Mode (9-18kg)

WARNING

- Child car seat will become unstable if the belt end is loose. Do not use the product if the belt end on the buckle side is found loose.

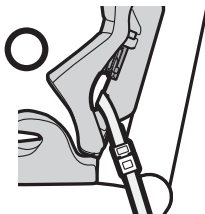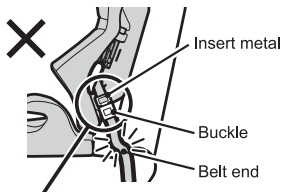

* Even the buckle touches the product but if the belt end is not loosened, you can use the product.

Check and re-install once again the steps stated on P.15 ~ 17 in case child car seat is not secured. Install on other seats if the child car seat still fails to secure. Otherwise the child car seat may not function properly as designed and may become cause of danger.

Seating the child

Choose appropriate shoulder belt insert outlet before seating the child. (Please refer to P.12)

WARNING

- Do not let baby wear clothes from which legs cannot be separated.
- Do not seat baby in wrong position as illustration. Otherwise baby may be endangered.





1 Pull out the baby belt.

- Press the baby belt adjustment button under the cover.
 - And pull the baby belt forward to loosen it. (see as below)
- * Pull the baby belt to adjust, not the shoulder belt cover.



Hint

- To avoid the child pressing the belt adjustment button, the buckle button is designed to hard finding.
- Make sure to press on "PUSH" mark while pressing on the adjustment button.
- If the belt adjustment button is secured too tight, pull the baby belt toward at the same time when pressing on the button.

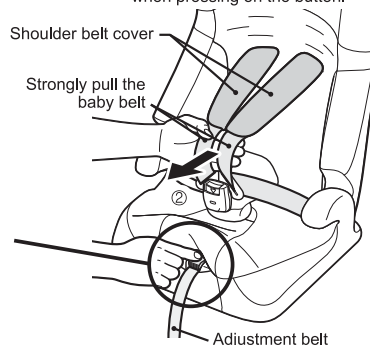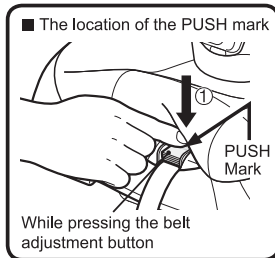


To lengthen the baby belt (while unseating the child)

Using as Child Mode (9-18kg)

Seating the child

- 2** To release the insert metal.
- 1 Press the buckle button.
 - 2 Release the insert metal.

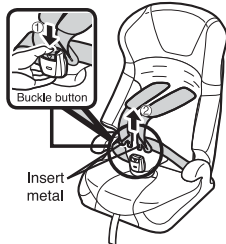

- 4** Make sure the colored lock indicator turns to green.

Color changed to green




WARNING

- Make sure the buckle is secured to avoid child from falling off seat accidentally during accident, or getting caught by belt on its neck causing suffocation.


- 3** Seating the child.
- 1 Seat child inside and let child's arms go through the baby belt.
 - 2 Match both insert metals together and fasten it into buckle until it clicks into place.

Make sure the baby belt is not twisted.

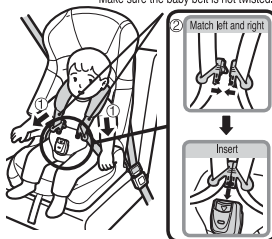

- To avoid child pressing the buckle button to release, the buckle button is designed to hard pressing.

- 5** To shorten the baby belt
- 1 Always pull down the waist belt to hold the pelvis position.
 - 2 The shoulder belt should be placed on the centre part of the child's shoulder.
 - 3 Pull the adjustment belt forward and adjust the two baby belts to appropriate length.

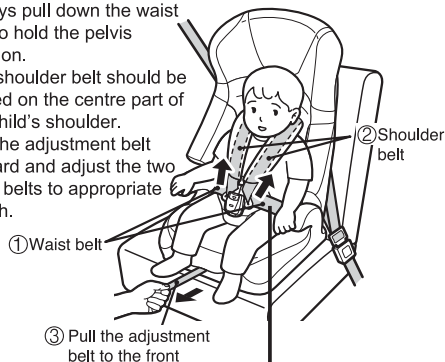

Always pull down the waist belt to hold the pelvis position



- Adjustment should neither be too tight nor too loose.
- Please make sure there's a palm's space between the body and the seat belt.
- Please refer to P.18. "To lengthen the baby belt" when you want to loosen the baby belt



WARNING

- Be sure to adjust the length of the belt to fix the child. Otherwise child may fall off from child car seat during accident.
- The loosen baby belt may tangle the child's neck to suffocation.



Using as Junior Mode (15-25kg)

Preparation

Weight	15-25kg
Height	95-120cm
Reference age	3-7 years old
Using method	Detach the baby belt, to secure the child with the vehicle seat belt. Shoulder belt positioner should be used to fit the child's shoulder



Hint Booster seat mode can be used for child who is 15-25kg. However the shoulder belt may touch the child's neck and it is recommended to attach the backrest and use as junior mode.



DANGER

- Make sure to install on a seat equipped with 3-point seat belt. Do not install with a 2-point seat belt. Otherwise the child car seat may not function properly as designed and may cause of danger.
- Make sure to secure the child car seat with the seat belt even when it is empty. Otherwise it may become a potential danger in case of sudden brake etc..



WARNING

- The shoulder belt positioner must be used or the shoulder belt may slip off the shoulder and cause danger.
- Disable the securing function of seat belt if there is any retracting function on the seat. Otherwise it may exert excessive pressure on child's chest. (Refer to P.5 for details.)
- Always keeps the seat belt is tight fitted. Any looseness may cause the child be tangled to the neck that may cause of suffocation.
- Do not install on a seat of which the seat belt is damaged.

Switching to Junior mode

Please detach the baby belt and crotch belt if it was used as child mode (P.12).



CAUTION

Please remove the child car seat from the vehicle seat before changing the mode.

To detach the baby belt



1

Pull out the baby belt.


- ① Match both insert metals together and fasten it into the buckle until a "Click" sound is heard.
 - ② Press on the belt adjustment button "PUSH"
 - ③ Grab both left and right baby belt and pull them forward to loosen.
- * Pull the baby belt to adjust, not the shoulder belt cover.

Hint

- To avoid the child pressing the belt adjustment button, it is designed to hard finding.
- When pushing the belt adjustment button, please make sure to press on the "PUSH" mark.
- If the baby belt adjustment button is secured tightly, pull the baby belts towards at the same time when pressing on the button.

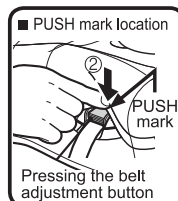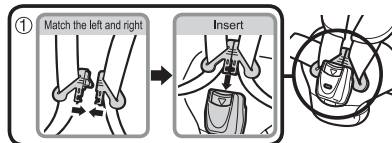


Shoulder belt cover
Strongly pull the baby belt

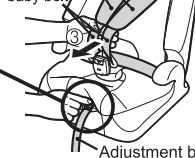


Using as Junior Mode (15-25kg)

- 2** To detach the baby belt.
- ① Remove the left and right baby belt from the belt adjustment metal at the back of main body.
 - ② Remove the shoulder belts from the shoulder belt covers.
- * Pull on the baby belts but not the belt covers to remove the baby belt.

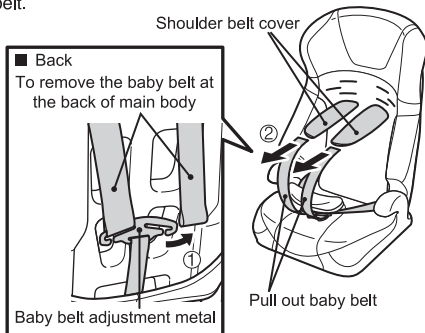


- ③ Remove the baby belt from the baby belt adjustment metal.
- ④ Pull the baby belt through the openings from the back of the main body.

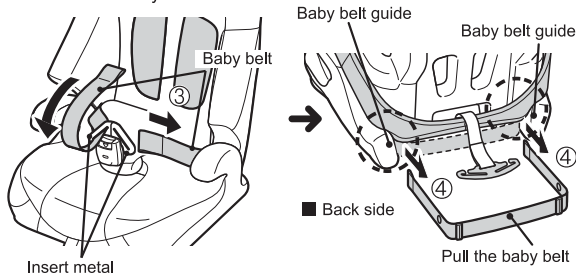

Hint Make sure belts are not twisted or reversed before pulling out the baby belt.

- 3** Detach the shoulder belt cover
- Pull out both the left and right shoulder belt covers from the back.

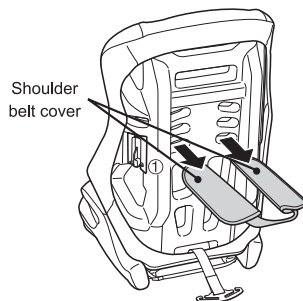


- Please refer to P.30 for "To attach the baby belt"
- Please refer to P.22 for "To detach the crotch belt"



CAUTION


- Please store the baby belt and crotch belt carefully and not to lose them.

■ Baby belt

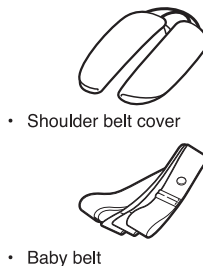

■ Crotch belt

- Insert metal

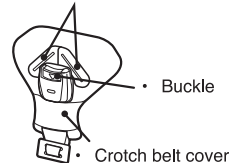

- Baby belt



In order not to lose the insert metal, please fasten it into the buckle.

Using as Junior Mode (15-25kg)

To detach the crotch belt

Main body is not in stable condition. Remove booster seat from backrest before this step. (P.11)

- ① Pull out the belt stopper at the bottom of the seat base a little bit, place it vertical and insert the whole belt stopper through the opening to the surface of seat base.
- ② Pull out the crotch belt from the surface of seat base.

Hint




- Press onto the crotch belt from the top of seat base and the belt stopper can be removed more easily.





WARNING

- After installing the belt stopper, please pull on the crotch belt to ensure it is secured.

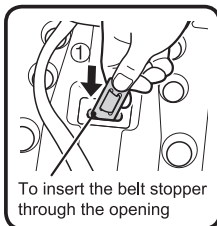

■ Back side

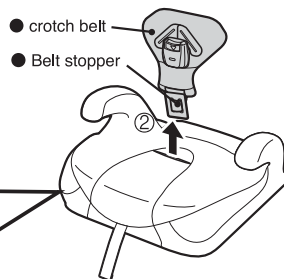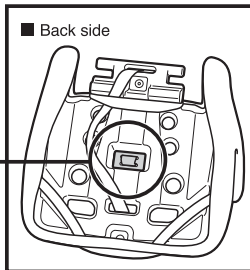

- * Place the belt stopper vertically and insert it through the opening on the booster seat for attaching.

 


CAUTION

Please detach the backrest


- Before detaching the crotch belt or main body will become unstable.
- Please handle the detached baby belt, crotch belt and not to lose them.

■ Baby belt



• Shoulder belt cover

 ■ Crotch belt



• Baby belt

• Insert metal



• Buckle

• Crotch belt cover



Hint

- In order not to lose the insert metal, please fasten it into the buckle.
- Please refer to P.20 for "Detaching the baby belt".

* To follow the reverse steps to attach the crotch belt.

To attach the crotch belt


Using as Junior Mode

Using as Junior Mode (15-25kg)

To store the baby belt adjustment metal


To store the baby belt adjustment metal

Detach the backrest, remove seat cover and cushion first and then store the baby belt adjustment metal.

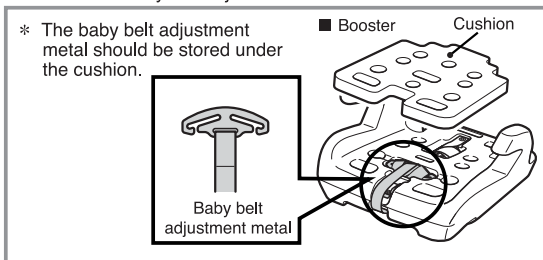

2


- ① Press the baby belt adjustment button.
- ② Pull the baby belt adjustment metal to the end.

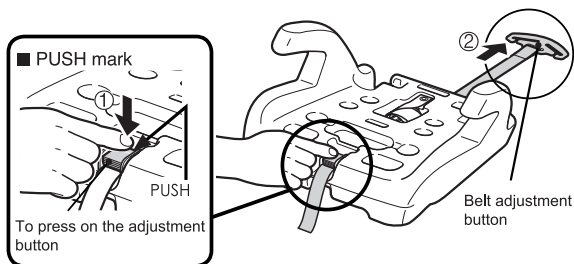

1

The baby belt adjustment metal should be passing through the adjustment belt insert outlet located at the joint of backrest and the booster seat.

■ Back

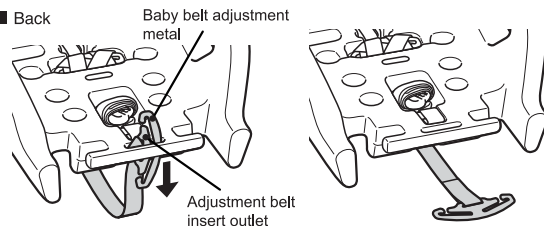

Hint

- Please refer to P.29 for to attach the baby belt adjustment metal.


3

To store the baby belt adjustment metal.

- ① The baby belt adjustment metal should be placed in front of the booster seat.

■ Front

- ② Rolling the adjustment belt evenly on the baby belt adjustment metal.
- ③ Put into the storage part.

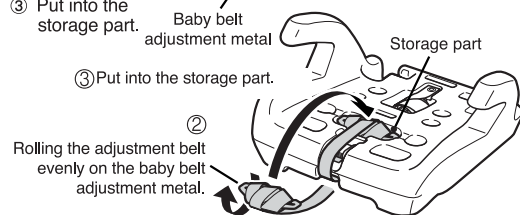


Using as Junior Mode (15-25kg)

Preparation of the shoulder belt positioner

Preparation of shoulder belt positioner


Detach the backrest (P.11) and remove seat cover and cushion (P.32) and take out the shoulder belt positioner.

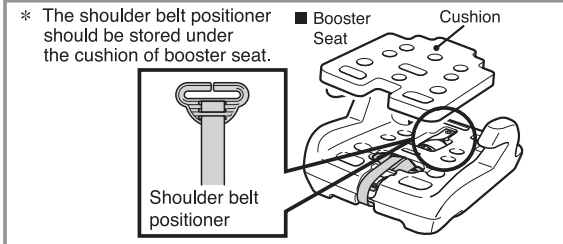

Hint

- Please refer to P.29 to store the shoulder belt positioner.


- 1 Take the shoulder belt positioner out from the storage.

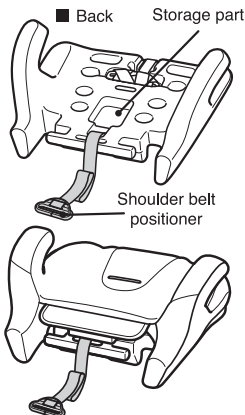

- 2 Attach the seat cover back to the booster seat. (Refer to P.32)


Please attach the backrest before moving on below steps

- 3 Pull the shoulder belt positioner between the seat cover and the body.

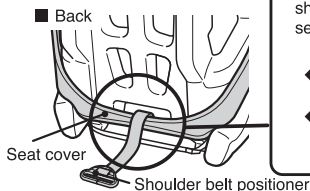


CAUTION

- The shoulder belt positioner should be pulled between the seat cover and body.

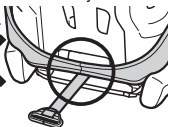

- 4 Attach the shoulder belt positioner.

- ① The shoulder belt positioner should be pulled through the insert outlet located on the opposite/side of the buckle.
- ② Pull the shoulder belt to the front.

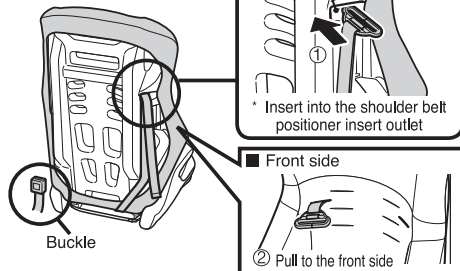

WARNING


- Please make sure the shoulder belt positioner is to be pulled through the shoulder belt positioner insert outlet and NOT the shoulder belt insert outlet.

Using as Junior Mode (15-25kg)

Installing to the car


⚠ WARNING

- Adjust the angle of the vehicle seat backrest if it has a reclining function. Set the child car seat backrest that is around 15 degree in line with the vehicle seat backrest. If the child car seat installed on a reclined vehicle seat may fail to protect the child from accident.

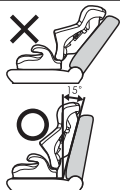

* Please use the angle checker printed on the cover printed on this user guide to check the angle.

- 1 Remove the headrest of the vehicle seat if it is detachable.
- 2 Adjust the vehicle seat belt to its highest position.

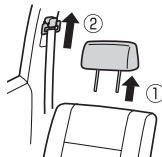


- 2 Place the child car seat on the vehicle seat and pull out the vehicle seat belt.
 - 1 Pull the vehicle seat belt through the shoulder belt positioner.
 - 2 Pull the waist belt through the waist belt guides under the left and right armrest.
 - 3 Fasten the buckle until "click" sound is heard.

* The shoulder belt should be pulled from the upper part of the backrest.

⚠ CAUTION

- Keep the child car seat assembled as illustration even when it is empty.

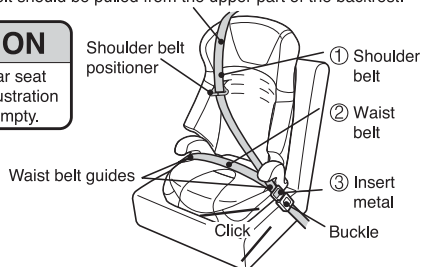

Seating the child

Seat the child deeply into the child car seat

⚠ WARNING

- The child car seat will become unstable if it is not fastened with the vehicle seat belt. Do not let the child go on and off the child car seat alone. The guardian should assist seating or unseating the child to the child car seat.
- Do not seat the child as illustrated. Otherwise the child car seat may not function as designed and become a danger.

- Leaning or bending its body forward.




- Leaning its body extremely to the side.



- Sitting with its feet up on the seat base.



Release the buckle temporarily. Seat the child deep into the seat, pull out the seat belt as illustrated and fasten the buckle until a sound "Click" is heard.
* Always pull down the waist belt to child the pelvis position.

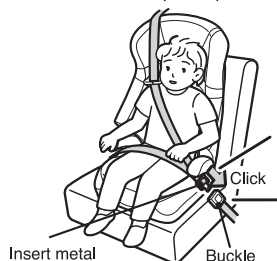

⚠ WARNING

- The child's arm at all times should not go underneath the waist belt.



⚠ CAUTION

- Be careful of the joint between the backrest and the booster seat in case child's clothes get jammed.

Using as Junior Mode (15-25kg)

To adjust the shoulder belt positioner

Seat the child deep into the child car seat.

Then adjust the shoulder belt positioner to be the same height of child's shoulder. The shoulder belt positioner is stored underneath the cushion of the booster seat.



The correct position of shoulder belt positioner

Adjust the shoulder belt positioner to be the same height of the child's shoulder as illustrated so that the vehicle seat belt fits the child.



WARNING

- The shoulder belt positioner should be adjusted to let the shoulder belt secured the child. Please adjust the height according to the child's growth.

To extend



To shorten



Attachment of belt


If the belt of shoulder belt positioner is detached, please attach the belt as illustrated.



Check after installation

Check the followings after seating the child and fastening the seat belt.

- ① Tight fit the child car seat to the vehicle seat backrest.
- ② The shoulder belt is passing from the upper part of the backrest.
- ③ The shoulder belt is passing through the shoulder belt positioner, is not tangling child's neck, or too loose from child's shoulder
- ④ Seat belt fits tight with child, not twisted, and without any looseness.
- ⑤ Child's pelvis is secured with seat belt (waist belt).
- ⑥ Insert metal is fastened to buckle firmly.
- ⑦ Seat belt (shoulder belt and waist belt) is passing through waist belt guides.

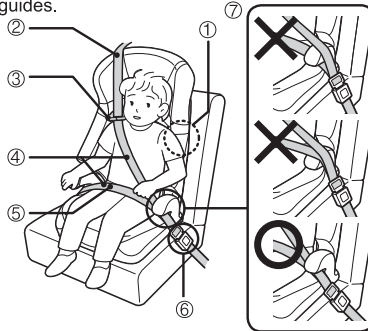

WARNING

- Check and re-install once again the steps stated on P.25 in case child car seat is not secured. Install on other seats if the child car seat still fails to secure. Otherwise the child car seat may not function properly as designed and may become cause of danger.
- Please use as booster mode instead if the child's head protrudes the headrest of the child car seat or it may not function as designed and lead to danger.

Using as Booster Mode (15-36kg)

Preparation

Weight	15-36kg
Height	95-145cm
Reference age	3-11 years old
Using method	Firstly detach the backrest and baby belt and set the vehicle seat belt. The shoulder belt positioner should be used.



- Booster seat can be used for child who is 15-25kg. However, the shoulder belt may touch the child's head and it is recommended to attach the backrest and use as junior mode instead.
- Do not use the lumbar support and head support.



DANGER

- Make sure to install on a seat equipped with 3-point seat belt. Do not install with a 2-point seat belt. Otherwise the child car seat may not function properly as designed and may cause danger.
- Make sure to secure the booster seat with the seat belt even when it is empty. Otherwise it may become a potential danger in case of sudden brake etc.



WARNING

- Disable the securing function of seat belt if there is any retracting function on the seat. Otherwise it may exert excessive pressure on child's chest. (Refer to P.5 for details.)
- Always keeps the seat belt tightly fitted. Any looseness may cause the child be tangled to the neck that may cause of suffocation.
- Do not install on a seat of which the seat belt is damaged.
- The shoulder belt positioner should be used or the seat belt may be loosened from the shoulder and cause danger.

To switch to Booster mode

- Please refer to P.20-24 when converting from child mode.
- Please detach the shoulder belt positioner (P.29) from backrest (P.11) when converting from junior mode.




WARNING

- Set the backrest of the vehicle seat at the upright position in case it has a recline function. A child car seat installed on a reclined vehicle seat may fail to protect a child from accident or child may fall off the booster seat. The loosen seat belt may tangle to the child's neck causing suffocation.



Installation to the car


- 1 Attach the headrest of the vehicle seat if it is detachable.
- 2 Lower the seat belt if it is adjustable vehicle.

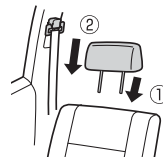

- 2 Place the booster seat on the vehicle seat, pull out vehicle seat belt,
 - 1 Pull the shoulder belt through the shoulder belt positioner.
 - 2 Pull the seat belt through the waist belt guides underneath the armrests.
 - 3 Fasten the buckle until "Click" sound.

* The headrest is attached.

Shoulder belt positioner ①
Waist belt guides ②

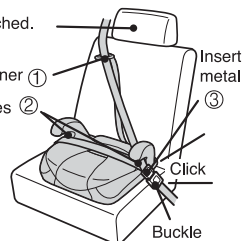

CAUTION

- Keep the booster seat installed as illustration even when it is empty.


Using as Booster Mode (15-36kg)

Seating the child

Release the buckle temporarily,

Seat the child deep into the booster seat, pull out the vehicle seat belt

- ① Pull the waist belt through the waist belt guides underneath the armrests.
 - ② Fasten the buckle until "Click" sound.
- * Always pull down the waist belt to hold the pelvis position

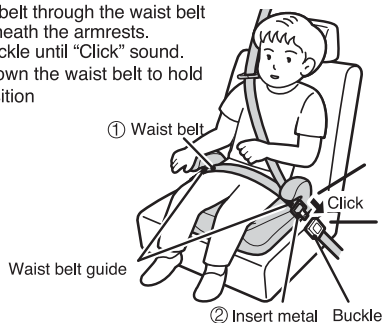

① Waist belt

② Insert metal Buckle




WARNING

- The child's arm at all times should not go underneath the waist belt.



- Hint**
- If the shoulder belt is slipping off the shoulder when seating the child whose height over 130cm, please use it with the shoulder belt pulling on the armrest.

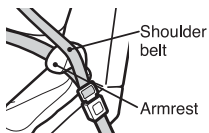

- * Please be sure to use the shoulder belt positioner

To adjust the shoulder belt positioner

Seat the child deep into the booster seat and adjust the height of shoulder belt positioner to fit the child.

- * The shoulder belt positioner is stored under the cushion of the booster seat.



The correct position of shoulder belt positioner

Adjust the shoulder belt positioner to be the same height of the child's shoulder as illustrated so that the vehicle seat belt fits the child.



To extend



To shorten



Attachment of belt

If the belt of shoulder belt positioner is detached, please attach the belt as illustrated.



WARNING


- Please adjust the shoulder belt positioner to fit the child's shoulder.
- Please adjust the shoulder belt positioner according to child's growth.

Using as Booster Mode (15-36kg)

Check after installation

Check the followings after seating the child and fastening the seat belt.

- ① Headrest of vehicle seat is attached.
 - ② The shoulder belt is passing through the shoulder belt positioner and is not tangling child's neck, or too loose from child's shoulder.
 - ③ Seat belt fits tight with child, not twisted, and without any looseness.
 - ④ Seat belt (waist belt) is securing child's pelvis.
 - ⑤ Insert metal is fastened to buckle firmly.
 - ⑥ Seat belt (shoulder belt and waist belt) is passing through waist belt guides underneath the left and right armrests
- * Please refer to the hint on P.28 if the shoulder belt slipping off the shoulder when seating the child who is over 130cm.

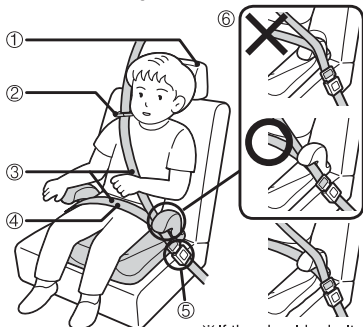

※ If the shoulder belt slip off the child's shoulder



WARNING


- Check and re-install once again the steps stated on P.27-28 in case booster seat is not secured. Install on other seats if the booster seat still fails to secure. Otherwise the child car seat may not function properly as designed and may become cause of danger.

Converting back to Child Mode

To store the shoulder belt positioner

When using as child mode(P.12), the shoulder belt positioner is not used and store it under the cushion.

- 1** Please detach the shoulder belt positioner when using as junior mode.

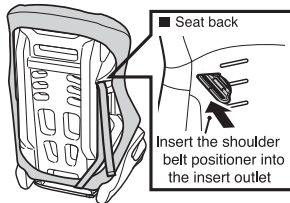


Hint • Please refer to P.24 "Preparation of shoulder belt positioner"

- 2** Detach the backrest (p.11) and remove seat cover and cushion. (P.32)

① Roll the shoulder belt positioner to the shoulder belt.

② Put into the storage part.

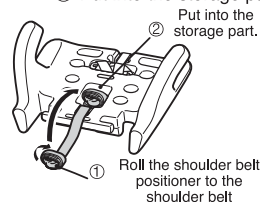

To attach the baby belt adjustment metal


When switching from junior mode (P.20) or booster mode (P.27) to child mode, take out the baby belt adjustment metal stored at booster seat and then install it onto the bottom side of the booster seat.

* Main body is not in stable condition. Remove the booster seat from backrest before this step. (P.11)

- 1** Remove the seat cover and cushion from the booster seat (P.32), take out the baby belt adjustment metal, and then put the seat cover and cushion back.



Hint • Refer to P.23 for removing baby belt adjustment metal and the way to store it onto the booster seat.

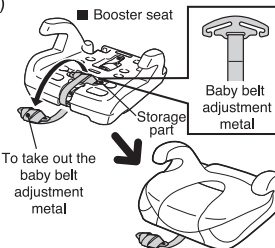


Converting back to Child Mode


To attach the baby belt adjustment metal

2 Make sure the adjustment belt is not twisted.

- 1 Pull the adjustment belt through insert outlets on the bottom side of the booster seat.
- 2 Pull the adjustment belt in between the main body and the rubberband.
- 3 Place the adjustment metal vertical and put it through the insert outlet.

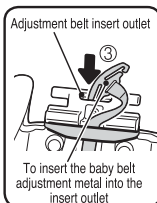

■ Back of booster

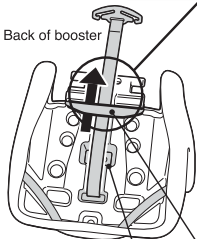

① Adjustment belt insert outlet

② Pull the adjustment belt between rubberband and main body

To install the baby belt

When using in child mode (P.12) make sure to install the baby belt onto the backrest.


* Main body is not in stable condition. Remove booster from backrest before this step. (P.11)

1 Attach shoulder belt covers to the shoulder belts.

- ① From the back of the seat, put the shoulder belt covers through the correct pair of insert outlets to the front of seat.

* Refer to "To adjust the shoulder belt position" (P.12)

- ② Pull the shoulder belt covers to the front.

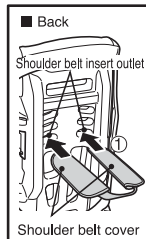


■ Front




Hint Refer to P.20 for removing baby belt.

3 Attach baby belt. Make sure baby belt is not twisted, and

- ① Put the baby belt through the left and right insert outlets located at the back of the backrest.
- ② Pull the baby belt to the front until the buttons have gone through the insert outlets completely.

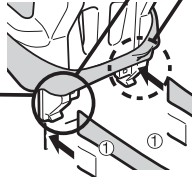

2 Check the direction of baby belt. Make sure belts are not twisted, and the protruded side is facing outside.

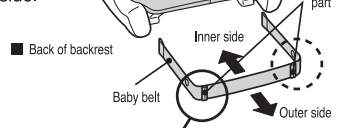

CAUTION

Make sure the protruded side is facing outside.



② Pull out the baby belt to the front.



CAUTION


Do not use the product when the baby belt buttons have not gone through the insert outlets.




Converting back to Child Mode

➔ To attach the crotch belt (P.22) and backrest (P.10) before moving on to next step.

- 4**
- ① Make sure baby belts are not twisted and pull the left and right baby belts through the insert metal respectively.
 - ② Make sure the baby belts are not twisted and attach the shoulder belt covers.
 - ③ Pull the shoulder belts through the insert outlets to the back.

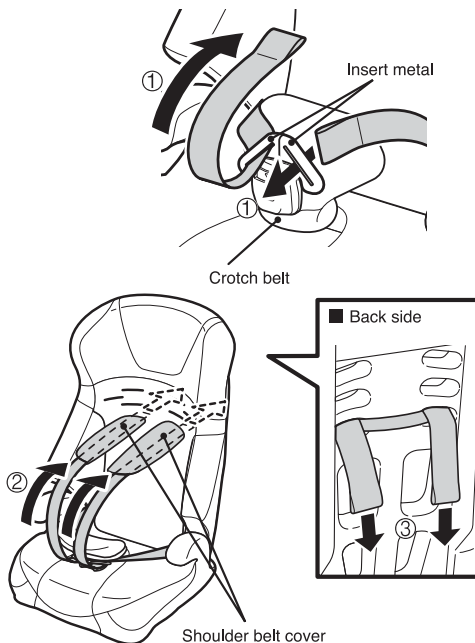


- 5**
- ① Attach both left and right baby belt to baby belt adjustment metal.
 - ① The belt adjustment metal and adjustment belt should be pulled through the body and seat cover.
 - ② Attach the left and right baby belt to the baby belt adjustment metal.

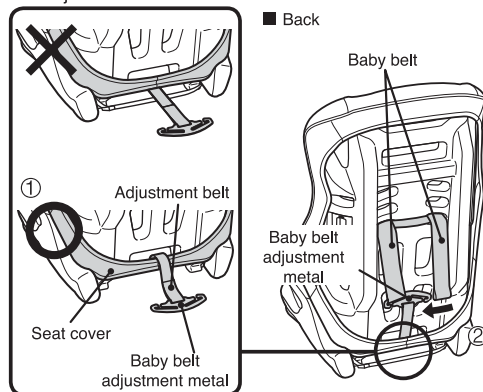

CAUTION

- The baby belt adjustment metal and adjustment belt should be pulled through the body and seat cover.

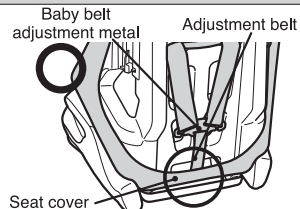

Maintenance


Lumbar support and head support

Please refer to P.11 "To attach and use the head and lumbar support".

To detach the seat cover on the backrest

Detach the baby belt (P.20), Remove the backrest (P.11) and detach the seat cover.

- ① Undo the snaps of the belt on the shoulder belt positioner insert outlet.
- ② Remove the upper part of the seat cover from the backrest.
- ③ Remove the seat cover from the backrest.

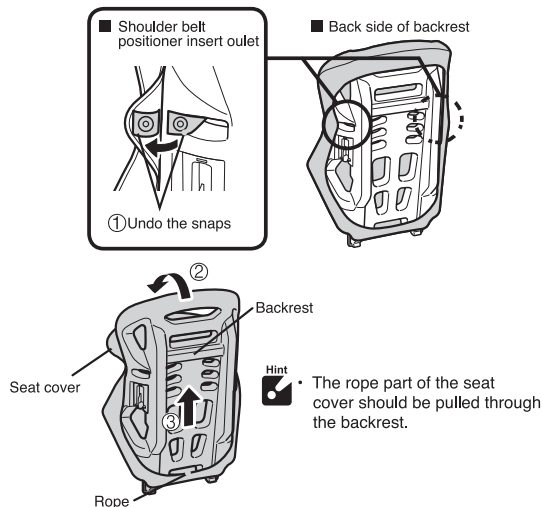

To detach

To attach and detach the fabric parts


To attach and detach the baby belt

Please refer to P.20 "To detach the baby belt".
Please refer to P.30 "To attach the baby belt".

To detach the seat cover on the seat part

Remove the backrest (P.11), detach the crotch belt (P.22) and then detach the seat cover.

- ① Detach the rubberband (total 3 places) on the bottom of the seat.
- ② Flip the front side of the seat cover.
- ③ Detach the pocket-like part.
- ④ Detach the seat cover from the armrest.

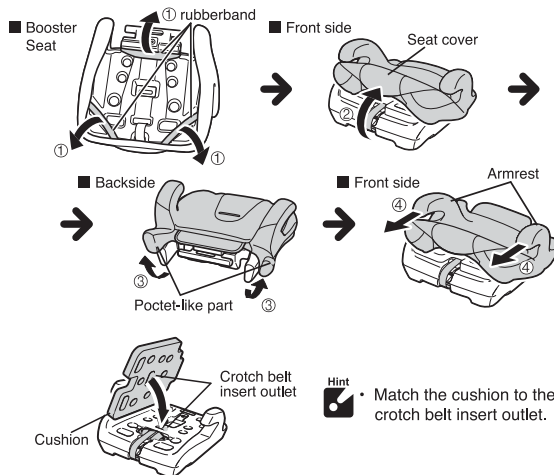







To attach

Maintenance / Storage and product specification

Washing the seat cover


Follow the below instructions to wash the seat cushion.

	Hand wash in water with a maximum temperature of 30 degree.
	Do not iron.
	Do not strongly twist or wring. Wrinkle may be left when strongly twisted.
	Do not bleach.
	No dry clean.
	Flat dry in shaded area.

※ Use detergent which does not contain fluorescent brightener.

※ Do not use washing machine, dehydrater and drier machine.

Please remove the urethane inside before washing the head pad.

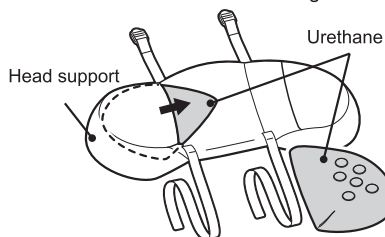

Maintenance of the main body and baby belt

- Simply wipe with a piece of wrung wet cloth, or use diluted neutral detergent for cleaning. After cleaning, cool dry the body in shade.



WARNING

- Do not use undiluted detergent, gasoline or other organic solvents when cleaning. Otherwise it may cause damage to the main body or the baby belt.

Storage

- Main Body: When the child car seat will not be in use for a period of time, uninstall it and store in shaded place clear from children.
- User Guide: Please read this user guide carefully and store it underneath the booster seat.

Product specification

Product size : (W)440x(D)450x(H)670

Product weight : Main Body : EG 5.2KG
S 4.9KG

Materials : Main Body : Polypropylene
Seat cover :
Surface : Polyester
Back : urethane