Combi

Combi Child Car Seat Culmove Smart ISOFIX Series

User Manual

This child car seat is classified as a "semiuniversal" product.

Always check the vehicle compliance before using the child car seat. (Refer to page 9.)

- For the safety of the child, please read this user manual carefully before use and use the child car seat properly.
- •Store this user manual in the pocket on the right side of the main body seat cover. (Refer to page 5.)

This product is certified according to the UN R44/04 standard.

- Semi-universal: Weight group 0+, 1
- Applicable child weight: Infants weighing up to 18 kg
 This product can be installed to vehicles with seats approved for installation of ISOFIX child car seats.
- This product can be used only with applicable vehicle seats in vehicles noted in Combi's "Approved Vehicle List".



Before Use

Before Installing to the Vehicle

Installing to and Uninstalling from the Vehicle

Seating and Unseating the Child

Maintenance and Other

Use only backward facing mode (do not use forward facing mode) for an infant weighing less than 9 kg.

Before Use

Thank you for purchasing this Combi child car seat.

For the safety of the child, please read this user manual carefully before use and use the child car seat properly.

The child car seat is designed to reduce injury to the child in case of traffic accident etc. However, there is no guarantee that the child car seat can completely protect the child from injury. A child using the child car seat must be accompanied by an adult.

Labels

The descriptions in this manual use the labels DANGER, WARNING and CAUTION to indicate important items for safe and proper use of the child car seat. These are very important items that indicate the potential consequences if not followed properly, and are categorized according to the level of severity. Always make sure to follow these items.

Label	Label contents		
<u></u> ∆ DANGER	Improper handling will result in imminent risk of death or serious injury.		
<u></u> MARNING	Improper handling may result in death or serious injury.		
 ∴ CAUTION	Improper handling may result in injury or damage to property.		
HINT	Useful hints for using the child car seat.		

Contents

Before Use
Before use ······ 1
Name of parts 3
Using conditions 7
Applicable vehicle seats
Inapplicable vehicle seats ······11
For safe use of the child car seat ······12
Before Installing to the Vehicle
Delete metalling to the comme
Using the inner cushion19
5
Using the inner cushion19
Using the inner cushion
Using the inner cushion
Using the inner cushion


	Installing to and Uninstalling from the Vehicle				
	Preparation for installation33				
	Installing to the vehicle35				
	Checklist after installation38				
	Uninstalling from the vehicle39				
	Seating and Unseating the Child				
Baby shoulder belt position reference					
	Adjusting the baby shoulder belt position				
	(headrest height) ······44				
	Seating the child45				
	Unseating the child ·······47				
	Maintenance and Other				
	Removing the seat cover49				
	Attaching the seat cover51				
	Washing method ·····54				
	Storage and disposal ······55				

Name of parts


Check that all parts are present before use.

• Store the receipt (proof of purchase) together with this manual.

 This manual uses simplified illustrations to help users easily understand operation and handling, and there may be slight differences from the actual product.

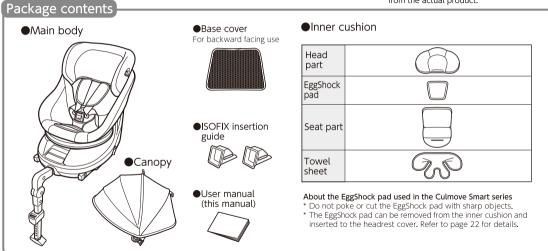



Front

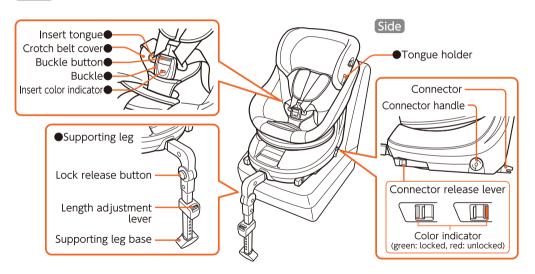

Name of parts

Front

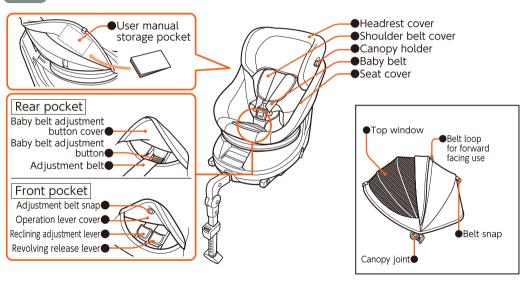

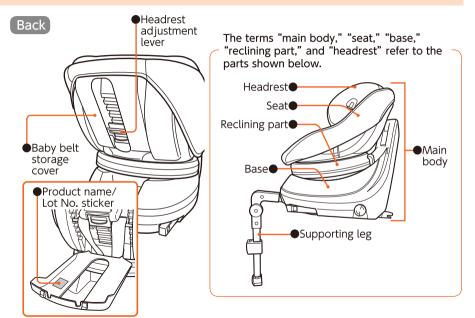

Using conditions

This section describes how to determine the installation direction and use the inner cushion according to the child's weight. Use the child car seat properly according to the child's weight.

2.5 kg (bodyweight)

Child weights under 7 kg

- Backward facing relative to driving direction.
- The inner cushion (both head part and seat part) must be used. All reclining angles can be used.
- The canopy can be used. (Refer to page 23.)
- The base cover should be used. (Refer to page 21.)

To avoid causing stress to the child, avoid continuous long-time usage and give the child a break from the child car seat about once every hour. Be particularly attentive to changes in the physical condition of infants with undeveloped neck muscles.

Usage guidelines

Height: up to about 60 cm

Age: newborn to around 4 months old (when the neck muscles have developed) * Newborn refers to newly born infants weighing 2.5 kg or more and who were carried for 37 weeks or more in pregnancy.



Backward facing

- Child weights between 7 kg and 13 kg
- Backward facing relative to driving direction
- The inner cushion (seat part) must not be used.
- * The inner cushion (head part) can be used according to the child's body size.
- All reclining angles can be used.
- The canopy can be used. (Refer to page 23.)
- The base cover should be used. (Refer to page 21.)

Usage guidelines

Height: about 60 cm to 80 cm Age: around 4 months old (when the neck muscles have developed) to 18 months old



 Always use backward facing mode for children weighing under 9 kg. Do not use forward facing mode in this case, as this is extremely dangerous to the child.

The child car seat can be used in three different ways according to the child's weight. (Refer to page 23 for how to use the canopy.)

> 9 kg 13 kg

18 kg

• Children weighing between 9 and 13 kg can use either forward facing or backward facing mode.

Forward facing



- Forward facing relative to driving direction.
- The inner cushion must not be used.
- All reclining angles can be used.
- The canopy can be used as a sunshade or should be removed from headrest, (Refer to page 23.)




 
In forward facing mode, fold up the canopy and fasten the snap on top of the canopy for use as a sunshade, or remove the canopy from the headrest. (Refer to page 23.)

 
Usage guidelines

Height: about 75 cm to 105 cm

extend above the main body backrest.

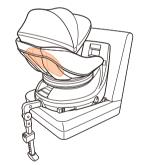

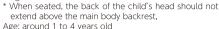

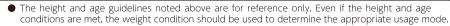



Applicable vehicle seats

This child car seat is an ISOFIX child car seat. It is intended for use in a vehicle equipped with ISOFIX anchors (bars), and has been certified according to the UN R44/04 standard.

This child car seat can be installed to vehicles with seats approved for installation of ISOFIX child car seats.

However, this does not mean that the ISOFIX child car seat can be installed to any vehicle equipped with ISOFIX anchors.

When using the child car seat, always check the vehicle compliance and check the user manual of the vehicle to make sure the ISOFIX child car seats noted below are supported.

Child	Weight group	Category	Size class	Anchor
			Е	ISO/R1
Under 13 kg	0+	Semi-universal	D	ISO/R2
			С	ISO/R3
9 to 18 kg	1	Semi-universal	А	ISO/F3
	Under 13 kg	Under 13 kg 0+	Under 13 kg 0+ Semi-universal	Under 13 kg 0+ Semi-universal D C

ISOFIX anchoring system

ISOFIX anchors are metal fixtures (bars) provided between the vehicle backrest and seat in order to install an ISOFIX child car seat. The name and position may differ according to the vehicle, so always check the user manual of the vehicle.



Inapplicable vehicle seats

Inapplicable vehicle seats Do not install the child car seat to a vehicle seat that meets any of the following conditions.

Do not use the child car seat if it cannot be secured firmly to the vehicle seat, even if none of the below conditions apply.

- Vehicle seat equipped with an airbag
 - ... Installation is possible to a vehicle seat with only a side airbag.



●Vehicle seat where the supporting leg base rests on a vehicle seat slide rail or an underfloor storage space, etc.



 Vehicle seat facing backwards or sideways relative to the driving direction.



•Vehicle seat with a seat surface too high or too low from the floor or with a floor shape that prevents the supporting leg from being installed properly.

 Vehicle seat with an extremely uneven surface that prevents stable installation.





 
DANGER

The following misuses may prevent the child car seat from functioning properly and pose a danger to the child.

Do not seat a child who does not satisfy the use conditions, or install the child car seat to an inapplicable vehicle seat.



●Do not install the child car seat with the supporting leg retracted. Always extend the supporting leg and adjust to the proper length.

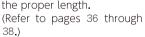



- Vehicle seat with an extra large headrest
 - ... Due to the shape, the vehicle headrest will interfere with child car seat reclining and rotation operations and adjustment of the child car seat headrest.
 - * The child car seat can be installed to a vehicle seat with a removable headrest if the above operations can be performed after the vehicle headrest is removed.
- •When installing to the vehicle, follow the instructions in this user manual and indicated on the main body, secure the connectors to the ISOFIX anchors, and check that the color indicators change to "green".

Do not use any item other than the ISOFIX anchors to secure the child car seat.





●This product cannot be secured using the vehicle seatbelt.

For safe use of the child car seat

⚠DANGER

- Do not install the child car seat to a vehicle seat equipped with an airbag. In case of collision, the deploying airbag will strongly impact the child car seat, which is dangerous to the child.
 - ... Installation is possible to a vehicle seat equipped with only a side airbag.
- Do not drive with the seat of the child car seat facing sideways. (Rotate the seat sideways only when seating and unseating the child.)
- Do not allow the child to stand, crouch or kneel on the child car seat.
 Make sure the child is seated properly, the crotch belt cover and baby belt are fastened correctly, the left and right insert tongues are

inserted firmly into the buckle, and the color indicators are green.







⚠Evacuation in case of emergency

In case of accident or other emergency, an accompanying adult should press the buckle button to release the baby belt and evacuate the child from the vehicle immediately.



↑WARNING

The following misuses may prevent the child car seat from functioning properly and pose a danger to the child.

- Always keep the baby belt fitting snugly. A loose belt may become wrapped around the child's neck and result in suffocation.
- Adjust the baby belt to the proper length. (Refer to pages 41 through 46.)
- •When using the child car seat in backward facing mode, always attach the inner cushion properly to fit the child's body. (Refer to page 19.)
- The child car seat may suffer structural damage in the event of collision or even if it is dropped one time or falls from a high level. In this case, immediately stop using the child car seat even if no damage is visible.







- Contact Combi's Customer Service Center for repair if the buckle becomes iammed with dirt, food crumbs or other objects and cannot be fastened securely or is too stiff to release easily.
- Do not use the child car seat if the baby belt is damaged in any way. Contact Combi's Customer Service Center for repair.
- ●The buckle may be pressed and released accidentally by the child. Check periodically to make sure the insert tongue is securely fastened to the buckle. If the buckle is released. the child car seat will not function properly and the baby belt may become wrapped around the child's neck.







For safe use of the child car seat

↑WARNING

- •Do not leave the child in the vehicle unattended. On sunny days the cabin temperature may rise and pose the risk of dehydration. Other accident may also occur. An adult should always accompany the child
- Depending on the shape of the vehicle seat, the vehicle seat headrest may interfere with the backrest of the child car seat and prevent child car seat rotation. Do not attempt to forcibly rotate the child car seat in this condition. This may result in malfunction.
- •If the canopy is misused, it may contact the child in the event of collision or other accident, which is dangerous to the child. Be sure to read the instructions carefully and use the canopy properly. (Refer to page 23.)
- •Always fasten the adjustment belt to the snap located on the back of the operation lever cover when using the child car seat. A loose belt may become wrapped around the child's neck and result in suffocation.







The following misuses may endanger the child or other passengers.

- •Always secure the child car seat with the connectors even when the child is not seated. Sudden braking or collision may cause an unsecured child car seat to move inside the vehicle and interfere with driving.
- •If backward facing installation to the passenger seat without an airbag obstructs the driver's view to the side mirror, install the child car seat to a rear vehicle seat.
- Do not install the child car seat to the passenger seat if installation interferes with proper and safe use of the gearshift and handbrake or other driving operations.
- ●Do not install the child car seat to the passenger seat of a 2-door or 3-door vehicle when passengers will ride in the rear seat. This may obstruct exit from the vehicle in an emergency.







♠ Daily inspection

To ensure proper function of the child car seat, check the following items before use.


Check that the baby belt fits snugly against the child's body. (Pull the adjustment belt to adjust the fit.)

Check that the insert tongue is inserted firmly into the buckle and the insert color indicator has changed to green.

Check that the revolving release lever and reclining adjustment lever are returned to the proper positions and the seat is securely fixed

Try to rock the main body forward and back to make sure that the child car seat is securely fastened to the vehicle seat.

Adjust the length of the supporting leg so that the supporting leg base rests on the vehicle floor.

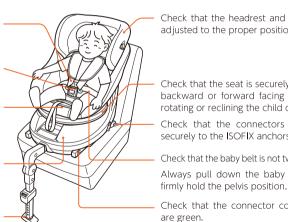

Check that the headrest and baby belt are adjusted to the proper positions.

Check that the seat is securely locked in the backward or forward facing position after rotating or reclining the child car seat.

Check that the connectors are fastened securely to the ISOFIX anchors.

Check that the baby belt is not twisted or loose. Always pull down the baby waist belt to

Check that the connector color indicators are green.

^{*} The illustration shows an example of forward facing installation.

For safe use of the child car seat

CAUTION

- Exposing the child car seat to direct sunlight may cause the main body, insert tongue and other parts to become hot and burn the child. Park the vehicle in the shade or cover the child car seat on sunny days such as during summer time. Also, touch each part and check that it is not too hot before seating the child.
- •Do not operate or adjust the child car seat while driving. Also make sure that other children riding in the vehicle do not touch or play with the child car seat
- Do not use the child car seat as a normal chair, as it may tip over or fall, possibly resulting in injury. Do not use the child car seat for purposes or in ways other than described in this user manual.







Make sure the child car seat does not get jammed between the vehicle doors or other movable parts.



•Do not carry the child car seat by any part other than the base. This may result in malfunction.



 Users with long fingernails or artificial nails should be especially careful when fastening or adjusting the child car seat to prevent them from becoming jammed in gaps or moving parts.



 Depending on the shape and surface material (leather, etc.) of the vehicle seat, scratches or marks may remain after installation. Use of the "Combi Anti-scratch Protective Sheet" (sold separately) is recommended.

CAUTION

- Do not modify or improperly repair the child car seat. This may lead to accident.
- Only use parts included in the factory package or parts specifically authorized by Combi. This may damage the child car seat or result in malfunction or accident.
- •Do not install with a cushion or other object between the vehicle seat and the child car seat. This will prevent the child car seat from being secured properly.
- Do not expose the child car seat ` to wind and rain.



◆Do not use the child car seat with the seat cover and other sewn parts or the urethane and other cushioning removed. Also do not replace these parts with parts not specifically authorized by Combi for this product. (This may negatively affect safety performance in the event of a collision.)



- Be especially careful of unsecured items inside the vehicle. Sudden braking or collision may cause unsecured items to strike the child.
- Do not attach toys, a sunshade or other objects to the canopy. Sudden braking or collision may cause these items to strike the child.





 


For safe use of the child car seat

The inner cushion is designed to offer extra protection to small infants, and can be used only in backward facing mode. (The child car seat is shipped from the factory with the inner cushion attached.) The method of usage varies according to the child's weight.

should be

Misuse of the inner cushion may prevent proper function and endanger the child. Be sure to read the instructions carefully and use the inner cushion properly.

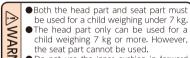

 Do not use the inner cushion in forward facing mode, regardless of the child's weight.
 Do not wrap the towel sheet around the child when using the child car seat.

Do not leave the removed inner cushion inside the vehicle. Sudden braking may cause the inner cushion to move inside the vehicle and interfere with driving.

Do not carry the child car seat by the inner cushion.

When hanging the towel sheet to dry after washing, shake the towel sheet several times before hanging it for a better feel when dried.

The inner cushion can be used in three different ways according to the child's weight.

	2.5 kg (bodyweight)	9 kg	18 kg
	Backwa	Forward facing	
	1 Child weights under 7 kg	2 Child weights between 7 and 13 kg	Child weights between 9 and 18 kg
Head part		Can be used.	Do not use.
Seat part		Do not use.	Do not use.
	Both the head part and seat part must be used.	The head part can be used according to the child's body size.	Should not be used.
<u>s -</u>	Towel sheet		


When the method of using the inner cushion changes, readjust the baby shoulder belt before using the child car seat. (Refer to "Baby shoulder belposition reference" on page 41.)

Towel sheet can be used.

HINT


Attaching and removing the inner cushion (head part)

- ① Lift up the headrest. (Refer to page 43.)
- ② To attach or remove the inner cushion (head part), fasten or unfasten the snap on the inner cushion (head part) and the snap in the center back of the headrest cover.

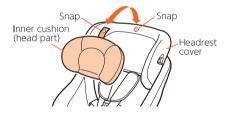

Attaching and removing the inner cushion (seat part) and attaching the towel sheet


- ① Press the buckle button and release the insert tongue from the buckle. (Refer to page 44.)
- ② Pass the crotch belt cover through the crotch belt cover slot to attach or remove the inner cushion.
- 3 Attach the towel sheet over the inner cushion (seat part).
- 4 Place the left and right parts of the towel sheet around the baby shoulder belt as illustrated.

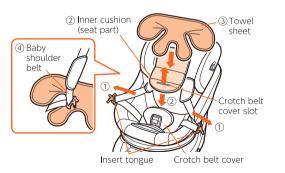

Using the base cover


In backward facing mode, use the base cover to protect the child's feet.

* Attach the base cover before installing the child car seat to the vehicle seat.

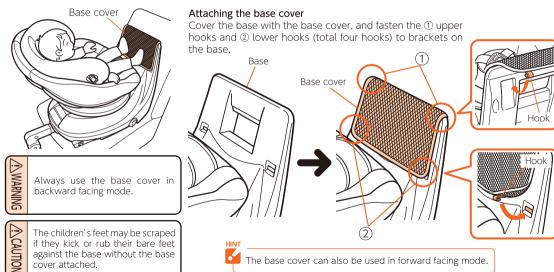


Using the EggShock pad

The EggShock pad can be removed from the inner cushion and inserted to the headrest cover. (The child car seat is shipped from the factory with the EggShock pad inserted to the inner cushion (head part).)

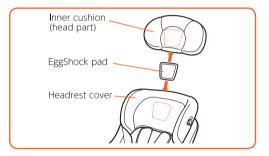

1 Remove the EggShock pad from the back of the inner cushion (head part).

- Release the two hooks on the upper back of the headrest cover, and remove the headrest cover from the headrest, (Refer to page 49.)
- Insert the EggShock pad into the EggShock pad storage pocket on the back side of the headrest cover.

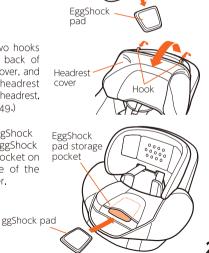

Using the canopy


The canopy can be used in the unfolded condition in backward facing mode. However, in forward facing mode, fold up the canopy and fasten the snap on top of the canopy for use as a sunshade. If the canopy is misused, it may contact the child in the event of collision or other accident, which is extremely dangerous to the child. Be sure to read the instructions carefully and use the canopy properly.

∴WARNING


If the canopy is misused, it may contact the child in the event of collision or other accident, which is extremely dangerous to the child. Be sure to read the instructions carefully and use the canopy properly.



- Do not carry the child car seat by the canopy. This may damage the product.
- Do not leave the removed canopy inside the vehicle. Sudden braking may cause the canopy to move inside the vehicle and interfere with driving.
- Fold up the canopy to the small size if it gets in the way when seating and unseating the child. (Refer to page 26.)
- Do not attach toys, a sunshade or other objects to the canopy. Sudden braking or collision may cause these items to strike the child.
- Pay attention to the child and others nearby when folding up and unfolding the canopy, and be careful not to pinch fingers, hands or other body parts.

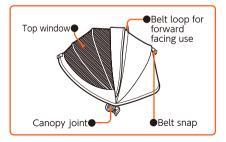

Methods of usage according to the child car seat facing

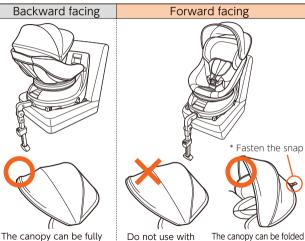

- The canopy can be fully unfolded.
- *The child car seat can also be used with the canopy removed.

the canopy unfolded.

up for use as a sunshade.
*The child car seat can

*The child car seat can also be used with the canopy removed.

Attaching the canopy

- 1 ① Fold up the canopy.
 - ② Align the canopy joints with the canopy holders on both sides of the headrest.
 - ③ Push the canopy joints down over the canopy holders until the hooks on the bottom of the canopy joints are inserted securely.






Using the canopy

2 ① Lift up the headrest until the canopy attachment snaps are visible. (Refer to page 42.)

② Fasten the two left and right snaps on the back of the canopy to the canopy attachment snaps on the headrest cover

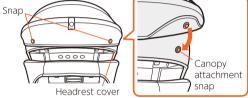

3 Check that the canopy joints are secured by the canopy holders, and the two left and right snaps on the back of the canopy are fastened to the headrest cover.

≜WARNING


Check that the two left and right snaps on the back of the canopy are fastened to the headrest cover.



Pay attention to the child and others nearby when folding up and unfolding the canopy, and be careful not to pinch fingers, hands or other body parts. Fold up the canopy when seating and unseating the child.

When seating and unseating the child (fold up)

Fold up the center part of the canopy as illustrated.

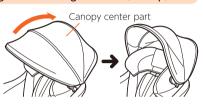

Removing the canopy

- 1) Fold up the canopy.
- ② Unfasten the two left and right snaps on the back of the canopy. (Refer to page 25.)
- ③ Pull and release the hooks on the bottom of the canopy joints with your fingers,
- ④ Release the canopy joints from the canopy holders.





Canopy holder

In forward facing mode, the canopy can be folded up and fastened with the snap on top of the canopy as a sunshade.

In forward facing mode (use as a sunshade)

- 1) Fold up the canopy.
- ② Pass the belt snap on the back of the canopy through the belt loop for forward facing use on top of the canopy, and fasten the snap.

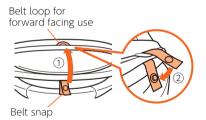

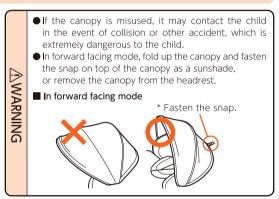

WARNING

Using the reclining function

The reclining angle can be adjusted in 3 levels in both forward and backward facing mode, regardless of the child's weight.

The vehicle headrest may interfere with the seat part of the child car seat and prevent reclining operation.

- ●Do not attempt to forcibly recline the child car seat. This may result in malfunction. Remove the vehicle headrest if possible.
- Do not install to a vehicle seat that does not allow reclining operation even with the vehicle headrest removed.
- * As long as normal reclining operation is possible, the child car seat can be installed to that vehicle seat even if the vehicle headrest interferes with the child car seat.




- ●Do not perform reclining operation while fingers, hands or other objects are inserted into the gaps behind the seat or below the reclining part.
- Make sure the child's foot is not inserted into the hole in the base back before performing reclining operation in backward facing mode.
- Also take care for the hands of other passengers.
- Always stop the vehicle in a safe place before performing reclining operation.
- ●The revolving release lever and reclining adjustment lever cannot be pulled at the same time. Attempting to forcibly pull both levers are the same time may result in malfunction.
- Take care not to let dirt, food crumbs or other foreign matter enter the gap between the reclining part and the base. This may result in malfunction. Contact Combi's Customer Service Center if reclining and rotating operation cannot be performed properly.






- Pull forward the reclining adjustment lever (left side) located below the operation lever cover,
 - Adjust the seat reclining angle. (3 levels in both forward and backward facing mode)

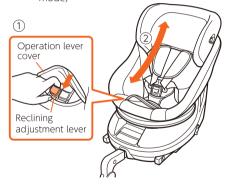

2 Release the lever and try to rock the seat forward and back to make sure that it is locked in place.



After performing rotating or reclining operation, make sure that the lever returns to its original position with a "click" sound and the seat is locked in place. Do not use the seat if it is not locked in place.

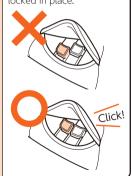

WARNING

Rotating the seat

The seat can be rotated in any reclining position for easier seating and unseating of the child.



 
WARNING

Do not drive with the child car seat rotated sideways. The child car seat will not function properly when the seat is facing sideways, which is dangerous to the child.

(Rotate the seat sideways only when seating and unseating the child.)



The vehicle headrest may interfere with the seat part of the child car seat and prevent rotating operation.

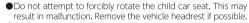



Do not install to a vehicle seat that does not allow rotating operation even with the vehicle headrest removed As long as normal rotating operation


is possible, the child car seat can be installed to that vehicle seat even if the vehicle headrest interferes with the child car seat.

 Do not rotate the seat in the condition. with the lock mechanism released. This may result in malfunction.



Do not rotate the seat while fingers, hands or other objects are inserted into the gaps in the base back, behind the seat back. and below the reclining part.

 When rotating the seat with the child seated, rotate slowly and be careful not to let the child's hands and feet strike the main body or other parts or become caught between the base and the seat etc.

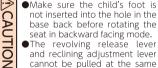


The revolving release lever and reclining adjustment lever cannot be pulled at the same time. Attempting to forcibly pull both levers are the same time may result in malfunction.

Take care not to let dirt, food crumbs or other foreign matter enter the gap between the reclining part and the base. This may result in malfunction. Contact Combi's Customer Service Center if reclining and rotating operation cannot be performed properly.



- While pulling forward the revolving release lever (right side) located below the operation lever cover, rotate the seat.
 - ② Once the seat starts to rotate, you can release the revolving release lever. When the seat reaches the forward or backward facing position, it locks in place with a "click" sound.

Backward facing

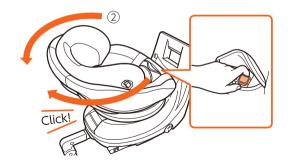

Forward facing



AUTION

Rotating the seat

• Check that the baby belt is not protruding from the baby belt storage cover.

If the seat is rotated with the baby belt protruding, the belt may become wrapped into the rotating part and result in malfunction.


If the baby belt is protruding, open the baby belt storage cover again and store the baby belt properly.

 Make sure the baby belt storage cover is properly closed. If the seat is rotated with the baby belt storage cover open, the cover may strike the base and result in malfunction.



- **2** Try to move the seat in all directions to make sure the it is securely locked in place.
 - * Due to the rotating structure, the seat may fe slightly shaky and rattle even when it is locked. T is normal and does not affect normal use.



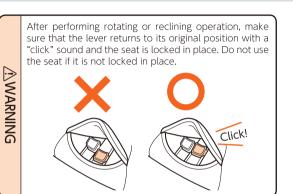

DANGER

WARNING

Preparation for installation

This section describes cautions for installation and the methods of installing the child car seat to the vehicle.

 An unsecured child car seat will not function properly, which is extremely dangerous to the child. In this case install it to a different vehicle seat.

Do not install the child car seat with the supporting leg retracted.
 Always extend the supporting leg and adjust to the proper length.
 When installing to the vehicle, follow the instructions in this user manual and indicated on the main body, and secure the connectors to the ISOFIX anchors. Do not use any item other than the ISOFIX anchors to secure the child car seat.

 Do not install the child car seat to a vehicle seat equipped with an airbag. In case of collision, the deploying airbag will strongly impact the child car seat, which is dangerous to the child.
 * Installation is possible to a vehicle seat equipped with

only a side airbag.

Do not drive with the seat of the child car seat facing sideways. (Rotate the seat sideways only when seating and unseating the child.)

This product cannot be secured using the vehicle seatbelt.

 Always secure the child car seat with the connectors even when the child is not seated.

 If backward facing installation to the passenger seat without an airbag obstructs the driver's view to the side mirror, install the child car seat to a rear vehicle seat.

 Do not install the child car seat to the passenger seat if installation interferes with proper and safe use of the gearshift and handbrake or other driving operations.

 
 Do not install the child car seat to the passenger seat of a 2-door or 3-door vehicle when passengers will ride in the rear seat. This may obstruct exit from the vehicle in an emergency.

Before installation

Park the vehicle in a flat location where all doors can be opened and closed.



2 Slide the front seat forward and tilt the backrest to the front to create space for easier installation to the vehicle.

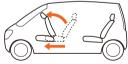


라 다 **33**

Vehicle headrest

Check the shape of the vehicle seat and the vehicle headrest, and remove the vehicle headrest if possible.

 The vehicle headrest may interfere with the seat part of the child car seat and prevent reclining and rotating operation.

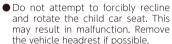

 Do not install to a vehicle seat that does not allow reclining and rotating operation even with the vehicle headrest removed




 As long as normal reclining and rotating operation is possible, the child car seat can be installed to that vehicle seat even if it the vehicle headrest interferes with the child car seat.

Illustration of completed installation

The illustration below shows the appearance after installation to the right rear vehicle seat.

The left and right sides are reversed for installation to a vehicle seat on the left side.

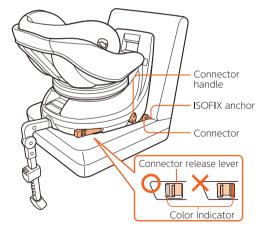

Installing to the vehicle


Check the user manual of the vehicle for the vehicle seats equipped with ISOFIX anchors and the anchor positions. This product can be used in two ways facing forward or backward, but the installation method is the same in either case. After installation to the vehicle is complete, position the child car seat facing forward or backward according to the child's weight.



Use the supplied ISOFIX insertion guides for easier child car seat installation when the ISOFIX anchors are obscured by the vehicle seat and difficult to see. However, note that the ISOFIX insertion guides cannot be attached to some vehicle seats.

Attachment method

Fit the groove of the ISOFIX insertion guide onto the ISOFIX anchor.

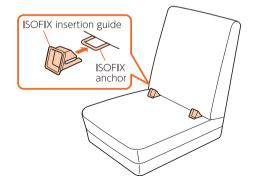


Installing to and Uninstalling from the Vehicle 6

- 1) Remove the vehicle headrest if possible. (Refer to page 34.)
 - 2 If the vehicle seat backrest can be reclined, adjust the reclining angle to make the gap between the child car seat and the vehicle seat as small as possible.




- ① While pressing the lock release button of the supporting leg, extend the supporting leg until it stops with a "click" sound.
 - 2) Turn the connector handles on both sides of the main body,
 - 3 Pull out the left and right connectors as far as possible.

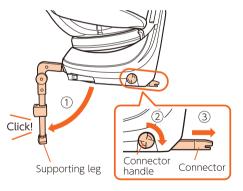

Installing to the vehicle

- 1) Fit the connectors onto the left and right ISOFIX anchors and push until they lock with a "click" sound.
 - 2) Check that the color indicators have changed from "red" to "green".

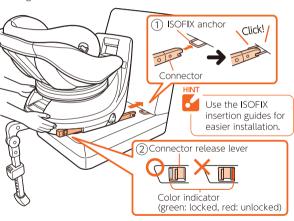


Hold the left and right sides of the base and push firmly until the back of the main body contacts the vehicle seat backrest





In some vehicles there may be a gap between the back of the main body and the vehicle seat backrest even when the base is pushed firmly. If the vehicle seat backrest can be reclined, adjust the reclining angle to make the gap as small as possible.

- 1) Pull the length adjustment lever of the supporting
 - 2 Extend the supporting leg until the supporting leg base rests on the vehicle floor.
 - 3 Release the length adjustment lever and make sure that it locks with a "click" sound.
 - 4 Try to move the supporting leg base up and down to make sure it is securely locked.

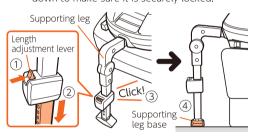


After adjusting the supporting leg, always check that the ♠ DANGER supporting leg base rests on the vehicle floor.

Checklist after installation

After installation, check the following to make sure that the child car seat is installed properly.


- 1) Check that the color indicators are "green."
- (2) Check that the length of the supporting leg is adjusted so that the supporting leg base rests on the vehicle floor.
- 3 Check that both connectors are extended by the same length.
- 4 Hold the base and try to rock the child car seat in all directions to make sure it is installed securely.

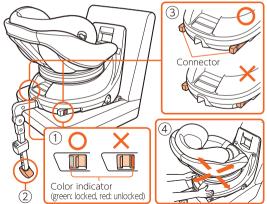


If you have any questions, please contact Combi's Customer Service Center,

Uninstalling from the vehicle

- 1 Shorten the supporting leg.
 - ① Pull the length adjustment lever.
 - ② Shorten the supporting leg.
 - 3 Lock the length adjustment lever

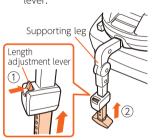


2 Pull the left and right connector release levers and make sure that the color indicators change to "red."

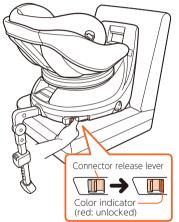


If the connectors are difficult to release
When the connectors are properly attached, the resilience of the vehicle seat may make it difficult to release the connectors. In this case, push back against the resilience of the vehicle seat and release the connectors one

at a time as follows.

- ① Hold the supporting leg and press it together with the main body against the vehicle seat on the side of the connector to be released.
- ② Pull the connector release lever with your

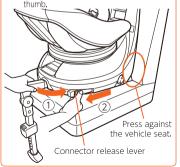


Remove the connectors from the ISOFIX anchors.

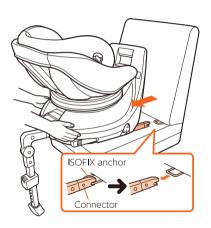

Retract the supporting leg.

- ① Tip the main body back gently.
- 2 Press the lock release button of the supporting leg. Fold the supporting leg until it stops with a "click" sound.

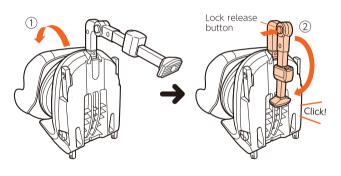

Baby shoulder belt position reference

Change the baby shoulder belt position according to the child's growth.

Refer to the following and adjust the baby shoulder belt position before using the child car seat.

(Refer to page 42 for how to adjust the baby shoulder belt position.)



- Adjust the baby shoulder belt to the proper position in accordance with the installation direction.
- Do not seat the child in the child car seat when it is in an unstable condition, as it may fall over. Be careful when adjusting and checking the child car seat in your house or other location.

Baby shoulder belt position

Backward facing mode

Adjust so that the baby shoulder belt is slightly below (about 3 cm) the child's shoulder height.




Forward facing mode

Adjust so that the baby shoulder belt is slightly above (about 3 cm) the child's shoulder height.



The baby shoulder belt position (headrest height) can be adjusted in 8 levels. However, do not adjust the baby shoulder belt position once the child is restrained by the baby belt.

- Rotate the seat sideways. (Refer to page 29.)
 This manual describes adjustment in forward facing mode.
- 2 ① Open the baby belt adjustment button cover and press the back side of the baby belt adjustment button.
 - ② Grasp both the left and right baby belts and pull towards yourself to loosen the baby belts.
 - * Do not pull on the shoulder belt cover, as this will not loosen the baby belts.

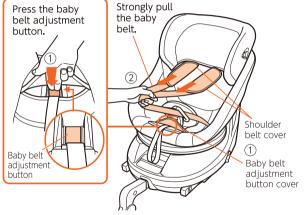

Seating and Unseating the Child

Adjusting the baby shoulder belt position (headrest height)

3 ① Rotate the seat to the backward facing position.
② While pulling the headrest adjustment lever, adjust the height of the headrest.



- Release the headrest adjustment lever at the proper position.
 - ② Check that the headrest adjustment lever is returned to its original position.
 - ③ Try to move the headrest up and down to make sure that it is secured.





 
Adjusting the baby shoulder belt position (headrest height) will tighten or loosen the baby belt.

Do not adjust the baby shoulder belt position (headrest height) once the child is restrained by the baby belt.

■ Do not dress the child in clothes in which the child's legs cannot be separated.



 Do not wrap the towel sheet around the child

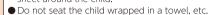


- Do not seat the child dressed in bulky clothing or too many clothes.
- Do not seat the child incorrectly as illustrated on the right. The child car seat will not function properly, which is dangerous to the child



- 1) Rotate the seat sideways to make it easier to seat the child. (Refer to page 29.)
 - * This manual describes adjustment in forward facing mode.
 - 2 Loosen the baby belt. (Refer to page 42.)

 - 1 Press the buckle button and release the insert tongue from the buckle.
 2 Seat the child deeply into the child car seat and pass the
 - child's left and right arms through the baby belt.
 - 3 Make sure that the left and right baby belts are not twisted.
 - 4 Adjust the inner cushion (head part) so that the convex part matches the child's neck



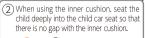






Seating the child

3 Match the left and right insert tongues and insert them into the buckle until they lock with a "click" sound.

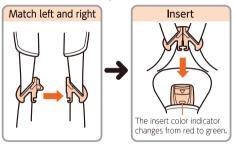


- The buckle button is designed to be too stiff for a child to release.
- The left and right insert tongues must be matched properly in order to insert them into the buckle.



If the left and right insert tongues are not inserted firmly into the buckle, the child may tumble out of the child car seat in the event of a collision or a loose belt may wrap around the child's neck and result in suffocation.

- 1) Always adjust the baby waist belt so that it snugly holds the child's pelvis at the lowest position possible.
 - 2) The baby shoulder belt should always be located in the center of the child's shoulder
 - 3 Pull the upper side of the adjustment belt toward vou.
 - 4 Adjust the length of the baby belt so that there is an adult palm's space between the child's body and the baby belt.

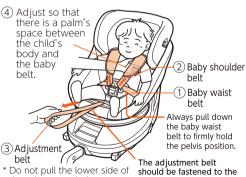

the adjustment belt.

The adjustment belt should be fastened to the snap located behind the operation lever cover.



When the adjustment belt is difficult to pull

- ①Rotate the seat to the backward facing position. (Refer to page 29.)
- 2 Release the hooks on the upper side of the baby belt storage cover and open the cover as illustrated.



② Baby belt storage cover

③ Pull the left and right baby belts toward you to loosen the belts.



4 Pull the upper side of the adjustment belt toward you to





- * Do not pull the lower
- side of the adjustment belt.

HINT

- Adjust the baby belt so that it is not too tight but also not loose or slack
- Refer to page 42 for how to loosen the baby belt.

™WARNING


- Always adjust the baby belt to the proper length. If the baby belt is not fit to the child's body, the child may tumble out of the child car seat in the event of a collision
- A loose baby belt may wrap around the child's neck and result in suffocation.
- **5** Rotate the seat (refer to page 29) to the forward or backward facing position according to the child's weight (refer to page 7).




When rotating the seat with the child seated, rotate slowly and be careful not to let the child's hands and feet strike the main body or other parts or become caught between the base and the seat, etc.

Unseating the child

- ① Press the back side of the belt adjustment button located under the baby belt adjustment button cover,
- ② Grasp both the left and right baby belts and pull towards yourself to loosen the belts.
 - * Do not pull on the shoulder belt cover, as this will not loosen the baby belts.

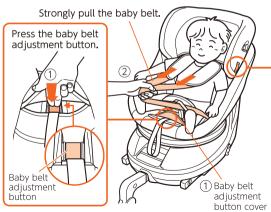

- ③ Press the buckle button and release the insert tongue from the buckle.
- ④ Insert the insert tongue into the tongue holder.

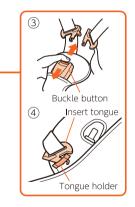

Removing the seat cover

When using the canopy, first remove the canopy (refer to page 25) and then remove the seat cover. Refer to "Using the inner cushion" on page 19 for the inner cushion.

Headrest cover

(3)Hook

Removing the headrest cover

(4)


- 1) Raise the headrest to the highest position. (Refer to page 42 for the headrest operation.)
- 2 Release the two hooks and unfasten the two snaps on both sides of the headrest cover.
- 3 Release the two hooks on the upper back of the headrest cover.

(4) Remove the headrest cover



Removing the seat cover

- Release the four books on the inner side of the seat surface. Release the two hooks on the outer side of the seat cover.
- 3 Unfasten the snap on the tip of the adjustment belt from the snap on the back of the operation lever cover and pull out the adjustment belt.
- 4 Unfasten the snap of the crotch belt cover, pull the buckle out from the seat cover, and then pull the seat cover up

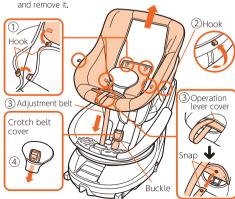


* Remove the canopy from the headrest before removing the seat cover. (Refer to "Removing the canopy" on page 25.)

Removing the shoulder be<u>lt covers</u>


- ① Rotate the seat to the backward facing position. (Refer to page 29.)
- ② Release the hooks on the upper side of the baby belt storage cover and open the cover as illustrated.



③ While pulling the headrest adjustment lever, pull the shoulder belt cover attachment loop off of the adjustment shaft.

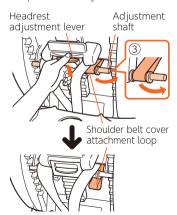

4 Unfasten the snaps of the shoulder belt cover and pull the cover forward to remove it

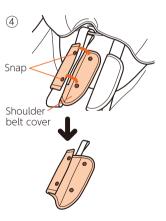


Attaching the seat cover

Refer to page 22 for how to insert and remove the EggShock pad. Refer to "Using the inner cushion" on page 19 for the inner cushion.


Attaching the seat cover

- ① Place the seat cover over the main body starting from the top side, pass the buckle through the crotch belt cover, and fasten the snap.
- ② Pass the adjustment belt behind the baby belt adjustment button cover, and fasten the snap on the tip of the adjustment belt to the snap on the back of the operation lever cover.
- Fasten the four hooks on the inside of the seat surface.
- (4) Fasten the two hooks on the outside of the seat cover.

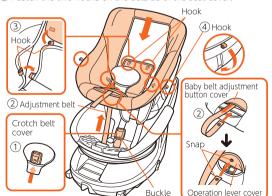


Attaching the headrest cover

- ① Cover the headrest with the lower part of the headrest cover.
- ② Fasten the two hooks on both sides to both sides of the headrest.
- ③ Fasten the two snaps on both sides to the snaps on the upper back of the headrest cover.

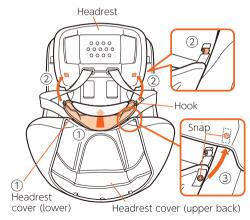


4 Cover the headrest with the upper part of the headrest cover, and fasten the hooks on the upper back of the headrest cover to the back of the headrest

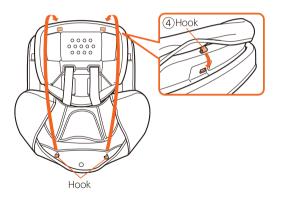

Attaching the shoulder belt cover

- 1) Rotate the seat to the backward facing position. (Refer to page 29.)
- 2 Release the hooks on the upper side of the baby belt storage cover and open the cover. (Refer to page 50.)
- 3 Fasten the snaps of the shoulder belt cover and pass the shoulder belt cover attachment loop through the baby shoulder belt slot

Shoulder belt cover Baby shoulder (3) Shoulder attachment loop belt slot helt cover

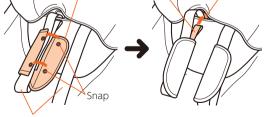

Baby shoulder belt


Attaching the seat cover

Attaching the shoulder belt cover

④ Pull the shoulder belt cover attachment loop out from the baby shoulder belt slot, pull the headrest adjustment lever, and pass the attachment loop over the adjustment shaft guide.

Pull on the shoulder belt cover to make sure that it does not come loose.

⑤ Securely close the baby belt storage cover.

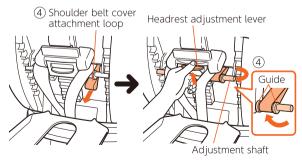

Washing method

Washing the seat cover and other sewn parts

Be sure to follow the washing instructions and cautions below.

- Follow the instructions noted on the washing label sewn onto the sheet cover.
- When using a washing machine, place the items in a laundry net. Failure to do so may result in fraying or other damage.
- Use the gentle cycle of the washing machine with cold or lukewarm water, or wash by hand.
- Do not use bleach.
- Use a neutral detergent. Do not use detergent containing fluorescent brightener or bleach. This may cause chapped skin or a rash.
- When using a horizontal washing machine (a washing machine with the drum facing horizontally or inclined), make sure the water level is sufficient.
- Color fading may occur due to the nature of the product.
- It is recommended to wash separately from other clothing and lightly colored items.
- Rinse thoroughly, wring out lightly, and then arrange the shape and dry in the shade.
- Do not iron.
- Do not use a dryer or dry cleaning.

Maintenance of the main body and baby belt

Normally wipe clean with a well-wrung wet (water) cloth. When extremely dirty, remove the dirt using a solution of neutral detergent diluted with water, then wipe with a wet (water) cloth and dry in the shade.

Maintenance of the towel sheet

Wash and maintain sewn items as follows.

<Washing>

- Fibers may come loose and colors may fade the first few times the towel sheet is washed, so wash it separately from other items.
- Fabric softener may cause towel pile or fibers to fall out or reduce water absorbency. Avoid using fabric softener if possible, or use only the indicated amount.

<Drying>

 Shake several times to remove excess water, arrange the shape and dry in the shade for increased pile and softness.

<Maintenance>

 If the towel sheet becomes frayed, do not pull on the loose threads, and instead carefully cut them off using scissors.

Maintenance of the canopy

- Wipe clean using a sponge moistened with detergent or warm water. Do not immerse the canopy in the detergent solution.
- Be careful not to injure yourself with the plastic parts, snaps, or other parts of the canopy.
- After removing the dirt with detergent, wipe several times with a wet (water) cloth or sponge so that no detergent remains.
- Wipe away any moisture with a dry cloth and dry the canopy in the shade.
- * Slight color fading may occur due to the nature of the product.

Urethane materials

- The dyestuff used in the seat cover and other sewn parts may transfer to the urethane materials on the back of these parts. However, this is not a problem for quality or safety.
- Remove the urethane material from inside the inner cushion before washing.



 Do not use undiluted neutral detergent, gasoline, benzene or other organic solvents when cleaning. These may damage the main body and baby belt, which is dangerous to the child.

Storage and disposal

Storage

Main body

When the child car seat will not be used for a long period of time, uninstall it and store in a well-ventilated place out of direct sunlight and away from children.

User Manual

Be sure to read and understand this user manual before use. Always keep this user manual in the storage pocket on the right side of the main body seat cover. (Refer to page 5.)

Disposal

- •When disposing of the child car seat, follow the standards of your municipality or region.
- ●The child car seat may suffer structural damage in the event of collision or even if it is dropped one time or falls from a high level. In this case, immediately stop using the child car seat even if no damage is visible. When disposing of the child car seat after an accident, remove the seat cover and other parts before disposal to prevent the child car seat from being reused.

Combi Culmove / Smart ISOFIX Series

Combi Corporation