

Combi Corporation

Baby Car Seat User Guide

(This user guide should be kept in the rear pocket of car seat backrest)

Prim Baby EG Prim Baby S



This product can be used in
backward facing mode only.




- For safety of your children, read this guide carefully and use the baby car seat accordingly after fully understanding the instructions.
- If not properly installed, baby car seat will not function as it is designed to and may cause danger. Do secure (fix) the car seat firm in your vehicle.
- Keep this user guide in the rear pocket of car seat backrest (See P.8).

For safe use of our product

Thank you for your patronage with our baby car seat. For proper use, read this user guide carefully.

Baby car seats are designed to reduce the injury to children in case of traffic accidents. However, it is not necessarily a guarantee that these seats can completely protect children from injury. When in use, children are to be accompanied by adults.

Labels such as [DANGER] [WARNING] [CAUTION] categorize the severity level of expected harm and damage caused by non-compliance to these instructions. These labels are very important and should be followed properly.

Labels	Contents of the labels.
 DANGER	Improper operation will directly cause death or severe damage.
 WARNING	Improper operation will possibly cause death or severe damage.
 CAUTION	Improper operation may cause injury or damage of the product.

Product application

This product is suitable for children who meet the following conditions.

- Weight : Children weighing below 10 kg
(Age range: Newborns* ~ around 1 year old)
- * Newborn: Refer to newly born babies weighing above 2.5kg and carried for above 37 weeks during pregnancy stage.
- Height : Below 76cm, whose head does not protrude out of the backrest after seated.




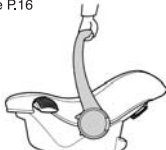



Cautions for newborns when using

- Do not keep baby in the seat for hours.
Long hour use may tires baby. It is recommended to take break every hour.
- Accompany another passenger when use as a baby seat in car.
Accompany another passenger to take care of baby. If no one can accompany, drive safely and check occasionally by taking breaks.

How to use

With another special stroller frame, this product can be used in 4 different ways.

Height less than 76cm and head should not protrude out of the seat.


Weight / Reference age	
In a car... As a baby seat See P.9-15 	<div><div>Newborn Weighing above 2.5kg and carried for above 37 weeks during pregnancy stage.</div><div>Below 10kg (Around 1 year old)</div></div>
When going out... As a baby carrier See P.16 	<div><div>Newborn</div><div>Below 10kg (Around 1 year old)</div></div>
In a room... As a rocking chair See P.17 	<div><div><div>Newborn</div><div>Chair</div><div>9kg (Around 10 months old)</div></div><div><div>Rocking chair</div><div>Neck is stable</div><div>9kg (Around 10 months old)</div></div><div>Do not use as a rocking chair but only as a chair until baby's neck is stable.</div></div>
When use with Do Kids 5 stroller When going out... As a baby stroller See P.18-19 	<div><div>The first stroller</div><div><div>Newborn</div><div>Below 10kg (Around 1 year old)</div></div><div><div>The second stroller</div><div><div>7.5kg or above (6 months old)</div><div>Below 12kg (Around 2 years old)</div></div></div></div>

Before using this product


Names of components

Before use, please check if any part is missing.

FRONT

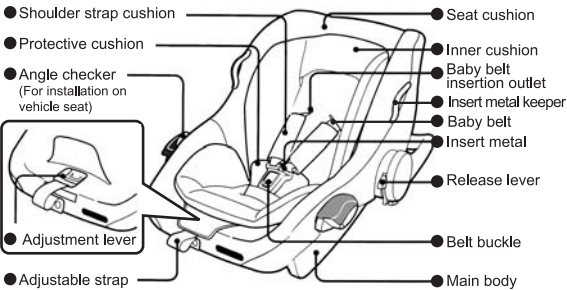

SIDE AND BACK

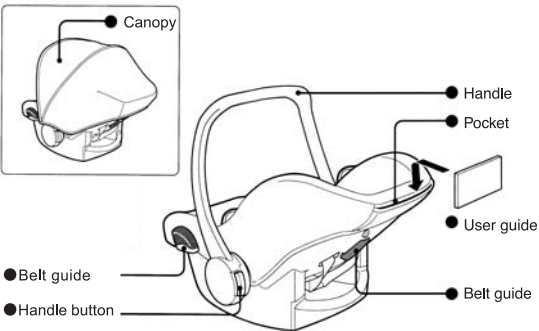

● Release lever is used when using the baby seat with the baby stroller, and will automatically decline after plugged into the stroller frame. Do no forcibly press it to avoid damage.



● Spacer
※Only for Taiwan models




● Egg Shock Pad
※Only for Do Kids 5 EG model

Installation method of the Egg Shock pad

Only for purchase of Do Kids 5EG / Prim Baby EG model



Egg Shock Pad is included for purchase of Do Kids 5 EG / Prim Baby EG model. Please install properly in accordance with the size of baby.

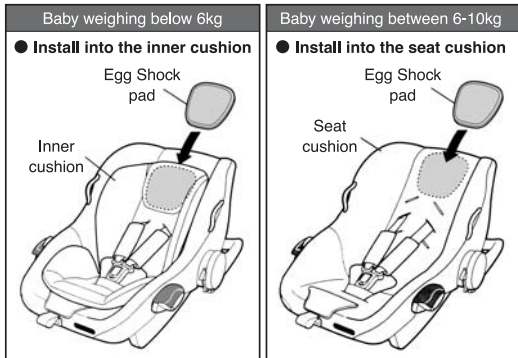

Baby weighing below 6kg

● Installation into the inner cushion

- 1** Insert the Egg Shock pad into the pocket located at the upper part of the inner cushion.

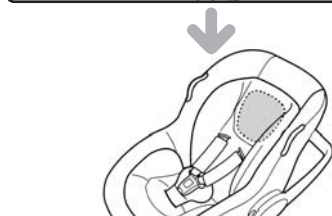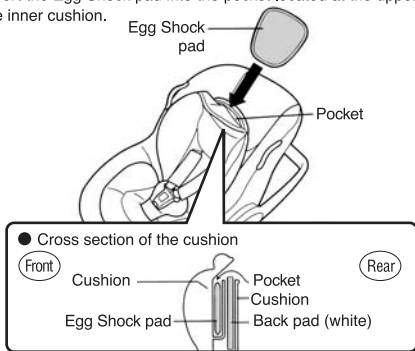

For Do Kids 5 EG model, the Egg Shock pad must be put into either the inner cushion or seat cushion for use.


Installation method of the Egg Shock pad

Only for purchase of Do Kids 5EG model


Baby weighing between 6-10kg

● Installation into the seat cushion



- 1** Release the hooks at both sides of the seat cushion after removal of the inner cushion (Please refer to [Removing the inner cushion] at P.6)

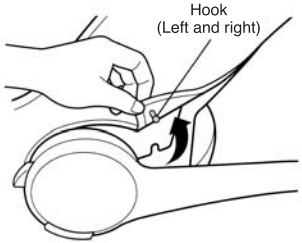

- 2** Release the upper part of the seat cushion.

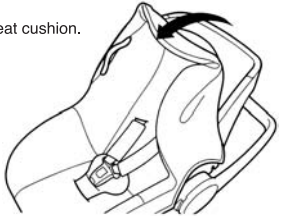


- 3** Put the Egg Shock pad into the rear pocket of the seat cushion. Restore the seat cushion and then the hooks.

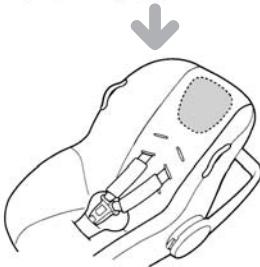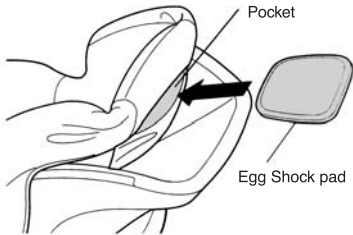

How to use the canopy

The Canopy protects the baby from strong sunlight.

Lift the handle to vertical position and hold the canopy with the Velcro tapes, keeping the stay outside covering the handle like ①. Release the hooks of the seat cushion ② and secure the rubber string onto the guide ③. Resume the hooks ④.

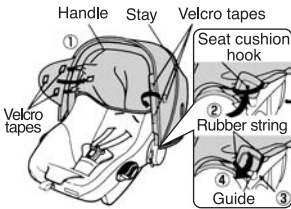


Removing the inner cushion

The purpose of the inner cushion is to hold and to keep baby's positioning the baby seat. Please remove the inner cushion when using the baby seat for baby weighing more than 6kg.


Release the insert metal by pressing the button on the buckle and remove the inner cushion after taking out the shoulder strap cushion from the baby belt.

Shoulder strap cushion

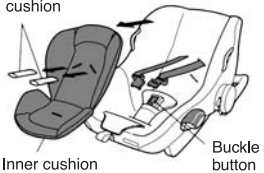


Parts adjustment

Seat baby on seat and adjust the baby belt insertion outlet according to size of baby.

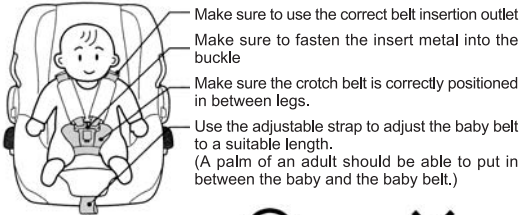

● Position the baby properly

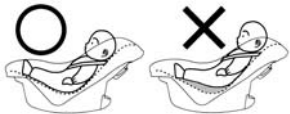

- Baby should not wear clothes of which legs cannot be separated.


- Do not wrap the baby with towel.
- Make sure the baby is not wearing oversized clothes.
- Make sure the baby sits correctly. Incorrect poses as shown below are dangerous.

⚠ WARNING




Seating the baby

- 1** Press the buckle button to release the insert metal. Loosen the baby belt (Refer to P.8) and place the insert metal into the insert metal keeper.

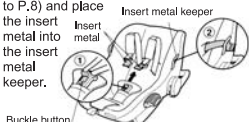


● Do not grip at the insert metal keeper to move the child seat in case it may get torn and cause the child to fall off.

- 2** Put the baby belt on the baby's shoulders and make sure the baby belts are not twisted.

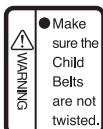

- 3** Put the insert metal together and insert the insert metal into the buckle until hearing a click sound.

The Indicator should turn green when the insert metal is fastened correctly.


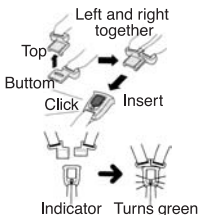


- 4** Pull the adjustable strap to forward and adjust the baby belt to fit to the child. (See Page 8)

Choosing correct shoulder strap insertion outlet

How to select appropriate shoulder strap insertion outlet

Choose the one nearest to baby's shoulders.

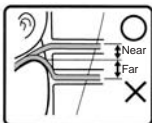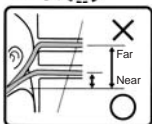

● Make sure to choose the shoulder strap insertion outlet to fit the baby. Improper positions may not be able to secure the baby in shocks.


- 1** Release the Insert metal by pressing the button of the buckle and remove the shoulder strap cushions from the baby belt.

- 2** Remove the baby belt from the back.



- 3** Insert the baby belt back into the correct shoulder strap insertion outlet and put back the shoulder strap cushions.

Shoulder strap insertion outlet

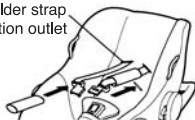

- 4** Place a baby and check if the shoulder strap insertion outlet is correctly chosen.

How to adjust baby belt length

Adjust the baby belt according to size of baby and make sure the shoulder straps of both side are same in length.



- Change and adjust length of the baby belt before use.
- Loose baby belt cannot secure baby properly and may tangle baby's neck and cause it to suffocate.


● To shorten the baby belt

...Pull the adjustable strap.




● To extend the baby belt

...While lifting the adjustment lever under the cover upwards, pull both baby belt from the front side.

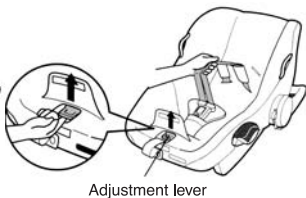

How to use the handle

By pushing 2 handle buttons (at the sides of the handle) together the handle can be change to 4 different angles.

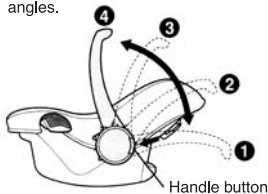


- The pressed button will resume to normal if the handle is adjusted to correct position.
- To avoid accidental over-pressing of the handle which may cause damage, the handle is designed such that it will not be locked firm in position ② and ③.



Mind the baby's hands when adjusting the handle.

Final check

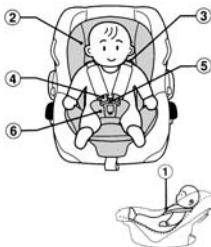


- ① Baby is sitting at proper position.
- ② Use the inner cushion properly.
(Weight : below 6kg)
- ③ Choose the correct height of the shoulder strap insertion outlet.
- ④ Baby belts are not twisted or loose.
(Leave a space of an adult's palm size from the body)
- ⑤ Insert metal are fastened and the indicator shows green.
- ⑥ The crotch belt separates legs on each side.

Use as a baby seat

Baby seats are designed to reduce the injury to children in case of traffic accidents. However, it is not necessarily a guarantee that these seats can completely protect children from injury. When in use, children are to be accompanied by adults.

The baby seat can be used in vehicles where 3-point seat belt is available.

■ 3-points seat belt holds a body at 3 points by a shoulder belt and a waist belts.

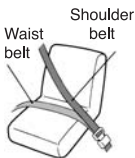

Inapplicable vehicle seat

Do not use the child seat in whichever situation mentioned below.

Apart from the followings, do not use the baby seat in case it cannot be secured.

- Vehicle seats without seat belt.



- Bucket seat with hollow shape in the center.



- Vehicle seat with 2 point ELR belts.




- Vehicles seats with a mounded middle portion which may not secure the child seat.



- Vehicles seat of which seat belt is too short.




- Vehicle seat with a sitting depth of less than 40cm.

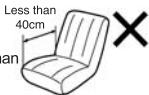

- Vehicle seat with airbag. Seat with only side-airbag is applicable.



- The length between the extension point and the buckle of the seat belt is less than 32cm.

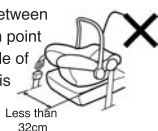

- Seat belt is extending from the middle of the seat, at a point before the belt guide.



- Vehicle seat with passive seat belt. This kind of seat belt automatically buckles the driver when closing the door after seated.



- Vehicle seats facing sideward or backward against driving direction.



Baby seat is applicable to both front and rear seats. However, for safety issue, it is recommended to install on rear seats. When install on front seats, it is recommended to slide back the seat for safety purpose.







- Do not install on seats with an airbag.

For safe use of our product



DANGER




The baby seat may not work as designed and may cause danger under the following misuses.

- Never seat a child that does not satisfy the using condition or install on inapplicable seats. 
- For safety reason, always install in backward facing mode. 
- Always fix the child seat with the vehicle seatbelt when installing in the vehicle. Never fix with a rope, string or other items than the seat belt. 
- Never install the child seat on seats with an airbag. In case of collision, the airbag will expose the child seat to major impact which is extremely dangerous. 
- Never use the child seat if it cannot be securely fixed as indicated in the user guide due to the type of seat belt or seat of your vehicle. 
- Insert the insert metals firmly then check the color of indicator has turned to green from red. 



DANGER


The baby seat may not work as designed and may cause danger under the following misuses.

- Never leave your child in the vehicle alone. On hot days the cabin temperature tends to become extremely hot and thus, may cause heat strokes and dehydration that may lead to death. It may also lead to unexpected accidents. An Adult should accompany a child in a vehicle at all times. 
- Keep the baby belt pulled tightly. Any looseness may get caught around the neck which may suffocate the child. Please adjust to suitable length. (Refer to P.8) 
- When knocked or made to fall from high to the ground this product should not be used again, even if the knock is one-off and no physical damage is seen. 
- Stop using the baby seat if any rift or damage is found on the baby belt. 

For safe use of our product


⚠ DANGER

The baby seat may not work as designed and may cause danger under the following misuses.

- Your child may accidentally press the buckle button and release the buckle. 


It is important that you periodically check that the child belt is securely fastened.

Any looseness may get caught around the neck which may be the cause of suffocation.


- Do not install on a seat of which the seat belt is damaged. 

- If it's difficult to see the side mirror, please re-set the baby seat to back seat. 


The following misuses may cause danger to other passengers.


- Always secure the baby seat even when not in use. Otherwise it may cause danger to driver or passengers in sudden brakes or accident. 


- Do not install the child seat on a seat if installation inhibits proper and safe use of the gearshift or hand-brake etc. 

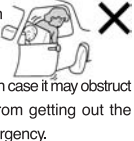
- Do not install on the front seat of a 2-door or 3-door vehicle in case it may obstruct passengers from getting out the vehicle in emergency. 


⚠ DANGER


- Leaving the child seat exposed to direct sunlight will cause the baby seat, buckle, locking clip and other parts to get excessively hot. Always touch and check all parts before seating your child. Failure to do so may cause burns. 


- Never adjust or operate the baby seat while driving. Make sure that passenger children do not play with the baby seat. 


- Never modify the baby seat or handle it in ways not described in this user guide. 

- Do not expose the baby seat to places that easily get wet. 

- To avoid unstable fixture, never install the baby car seat with a cushion in between the vehicle seat. 

- Do not leave things unsecured in the car. Things may fall off onto the baby when the car is in motion. 

- Do not use the baby seat without the cushions and covers. Do not replace them with other cushions, which may not be able to protect the baby. 

- Make sure the baby seat is not jammed in between doors or the sliding parts of vehicle seats. 

- Do not place the baby seat on high or unstable places like bonnet etc while installing or uninstalling the baby seat.

For safe use of our product



Check points on every use




To use the Baby Seat properly and safely, please check the followings before every use.

- ① Handle is in vertical position.
- ② Choose the correct shoulder strap insertion outlet.
- ③ Insert metal are in the buckle and the indicator shows green.
- ④ Baby belts fit the baby. (Adjust the length)
- ⑤ Baby seat is firmly positioned on the vehicle seat.
- ⑥ Baby belts are not twisted or loose.
- ⑦ Seat belt of the vehicle is firmly fastened.
- ⑧ For Prim Baby Taiwan models, make sure to use the spacer.



Emergency Exit

In case of emergency, such as accidents, press the button (In red color) to release the baby belt from the belt buckle and remove the baby from the vehicle immediately.

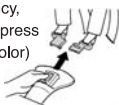

Installation to the vehicle

This part describes various types of safety belts, points to note when installing to vehicles and installation method.

※The baby seat may not be applicable to certain types of vehicle seats with different shapes. Please refer to P.9 for more details.



- Please install the baby seat only on vehicle seats with 3-point safety belt. Do not install on seats with 2-point safety belt.
- Unsecured baby seat is extremely dangerous. Try to install on other seats in case it can not be firmly secured on certain seat.
- Do not use things other than the safety belt to secure the baby seat.
- Do not install on vehicle seats equipped with airbags. Airbags when exploded during accidents may exert enormous impact and cause dangers.
※ However, seats with only side-airbag are applicable.



- Do not install if rift or damage is found on the safety belt.
- Install on other seats in case installation on front seat may affect the driver from seeing the side mirror properly.
- Do secure the baby seat even when it is not in use.
- Do not install the baby seat in the front seat in case installation inhibits proper and safe use of the gearshift, handbrake or other driving necessities.
- Do not install on the front seat of a 2-door or 3-door vehicle in case it may obstruct passengers from getting out from the vehicle in emergency.


Types of vehicle seat belts and points to note

Installation method of the baby seat may differ according to types of seat belt. Check with the following table about the type of your seat belts. In case there are difficulties to figure it out, refer to the manual of your vehicle.

Type of vehicle seat belt	Feature	Points to note
<ul style="list-style-type: none"> ● 3-point Seatbelt with ELR ● 2-point Seatbelt with ELR 	It extends when slowly pulled and locks when in impact.	Cannot fit for 2-point vehicle seat Belt
● Seatbelt with A/ELR	ELR function is cancelled when the belt is entirely pulled out and the belt will be automatically locked when restored. The ELR function will resume when the belt is entirely retracted.	Do no use if seatbelt entirely pull out. Resume the seat belt and the ELR function.
● ALR seatbelts	Seat belt is locked when pulling out is interrupted.	Inapplicable.
● NLR seatbelts	Refer to retractor with no locking function, can be adjusted to certain length to use.	Pull out enough length of seat belt to fix the baby seat.
● Manual seatbelts	Refer to seat belt to which no retractor is featured.	Adjust and fix the length of the seat belt according to the baby.

3-point safety belt

Refer to safety belt which holds a passenger by 3 points, two on left and right sides of the waist belt and one at the shoulder belt, as illustrated.

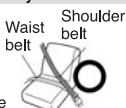

2-point safety belt

Refer to safety belt which holds a passenger only by 2 points at waist belt, as illustrated.



This product is not applicable to 2-point safety belt.

Preparation of setting (For baby weighing below 10kg)


Preparation on vehicle

- ① Adjust the seat angle to 10-30 degree.
- ② Move the headrest to the lowest position if it can be adjusted.
- ③ Move the seat belt holder to the lowest position if it can be adjusted.
- ④ Mover the seat to the back when positioned in the front seat.
- ⑤ For Taiwan models, place the enclosed spacer on the vehicle seat before installation.




Preparation on baby seat

- Keep the handle in vertical position.
- Position the baby seat as the rear facing. Never place the baby seat facing the front.
- Make sure the bottom of the baby seat touches the vehicle seat firmly.

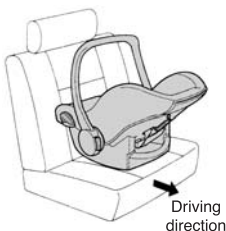

Installation method


- 1 Place the spacer on the vehicle seat to which Prim Baby is to be installed. (For Prim Baby Taiwan models only)

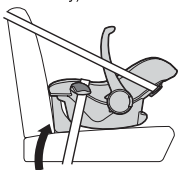

WARNING


- Prim Baby Taiwan models must be used together with the spacer.

- 2 Put the waist belt through the belt guides on both sides of the baby seat.

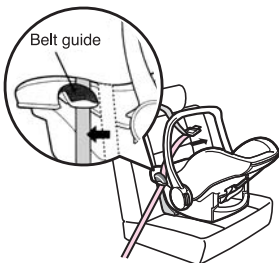

- 3 Put the shoulder belt through the belt guide at the back of the baby seat.

Vehicle's seat belt

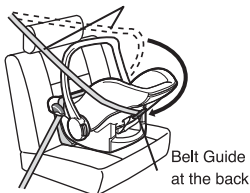


WARNING

- Make sure the shoulder belt should be in correct position at belt guide.

Hook Belt guide

- 4 Fasten the seat belt.


Insert metal of vehicle seat belt

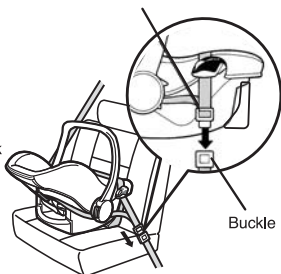

Buckle

- In case the seat belt is too short, press the baby seat downward to buckle up.

- 5 Tighten the waist belt and the shoulder belt and adjust the angle so that the angle checker shows green.

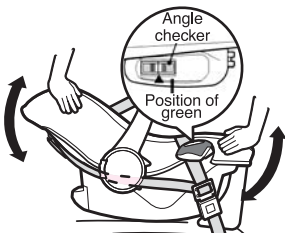

WARNING


- Please make sure the waist belt is secured into the belt guides on both sides of the baby seat.

Belt guide waist belt

Installation method

Inspection procedures after installation

Please check the followings to make sure if the baby seat is set properly.

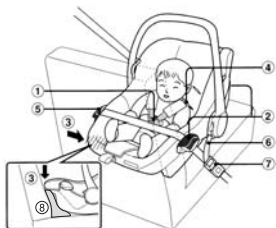

Using as a baby carrier

Installation is also possible even when a baby is seated.



WARNING

- Make sure if the baby seat is fixed properly. If the baby seat cannot fit, try to install on other seats. It is dangerous to use if the baby seat is not fixed properly.

- ① Insert metal of the baby seat are positioned into the buckle firmly and the indicator shows green.
- ② The seat belt is secured into the 3 belt guides (blue) correctly.
- ③ Vehicle seat and the edge of the baby seat has no gap in between.
- ④ Baby belt is adjusted to proper length (Refer to P.8).
- ⑤ Angle checker shows green.
- ⑥ Vehicle safety belt is tightened properly after seating the baby.
- ⑦ Vehicle safety belt is buckled properly.
- ⑧ Spacer must be used for Prim Baby Taiwan models.

Under such circumstances

Fixing the baby seat firmly

- Installation on back seats. When install on back seats, slide back the front seat until it touches at the back of the baby seat. However, in case the front seat cannot touch at the baby seat, restore and slide forward the front seat on the contrary.




WARNING

- Never install on seats with airbags. Airbag, when exploded during accidents, is extremely dangerous. (Side-airbag is applicable)

When the buckle of the seat belt is not secured.

Follow the instruction below if the seat belt buckle touches at the belt guide, which obstructs secured installation.

Insert metal of vehicle belt

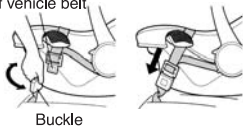

Buckle

- 1 Twist the buckle several times to shorten it.
- 2 Insert the insert metal to buckle up.



WARNING

- If the above method still cannot position the baby car seat, do not use the baby seat. It is dangerous to use unsecured baby seat.



Reverse the buckle if the seat belt gets loose from the belt guide after twisting the buckle.

Use as a baby carrier

Please refer to page 7-8 for positioning a baby, choosing correct shoulder strap insertion outlet and adjusting length of the baby belt.

! WARNING

- Always fix by the baby belt and buckle up for baby.



- Do not place the baby seat on chairs or tables where it may have chance to fall.



- Do not put the handle on shoulders. This position is not stable and may cause accidents.

- Do not carry the baby seat as the diagram. The handle may change its position suddenly and it may cause the baby to fall off.



- Pay particular attention and avoid to hit on stairs, level differences and slopes. The baby may fall off or the carrying person may be injured.




- Do not grip at the insert metal keeper to move the child seat in case it may get torn and cause the child to fall off.

How to hold the baby seat

Move the handle to vertical position, and it can be carried even with a child seated.

- Holding the handle

- Putting the handle on the upper arm and holding the main body by the other hand.

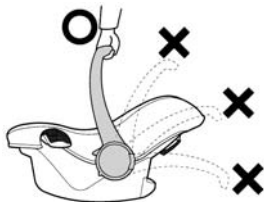

! WARNING

- In case the handle may slip off from the arm, make sure to hold the main body by another hand.

Using as a rocking chair



WARNING

The baby seat may not work as designed and may cause danger under the following misuses.


- For use as a rocking chair, only baby whose neck is stable enough should use, up to around 10 months old. Do not use as a rocking chair before the neck is stable.
- For use as a rack, only baby from newborn up to around 10 months old is applicable.
- Stop using if the baby's legs are long enough to touch at the floor.
- Do not use the baby seat without any adult supervision.
- Make sure to use the baby belt and adjust it to proper length, and then fasten the insert metal firmly into the buckle.
- Do not use as a rocking chair inside a car.
- Do not place the baby seat on tables or chairs where it is not safe. Pay more attention to stairs, different levels, and slopes where the baby seat cannot be held stable.
- Do not place the baby seat near to stove, or places where there may be chances things fall onto the baby seat.
- Do not seat more than one baby.
- The baby must be seated or unseated by a protector.
- Do not let a baby to lean out from the baby seat.



Please refer to page 7-8 for details of positioning a baby, choosing the correct shoulder strap insertion outlet, and adjusting the baby belt.

Use as a rocking chair


Position the handle at the rocking position and push the baby seat softly.



Rocking position

Use as a baby rack

Position the Handle at the Stable Position.



Stable position



WARNING

- Pay attention to the baby when swinging.
- Do not use it for long hours.



WARNING

- The handle may break if pressing the Baby Rack when it is at the stable position. Stop using if the handle is dislocated after forcibly pressed, even no physical damage is seen.



For Do Kids 5 buyer

Please read the Instruction Manual of Stroller and use the Stroller correctly.

Before use

- This product is designed to be used as a general baby stroller holding one baby for purposes such as a short walk, sun bathing and shopping.
- Recommended time length of use: within 1 hour.



WARNING

Wrong use may cause serious accidents. Please follow the instruction to avoid any accidents.

Misuse which may cause the baby to fall or the stroller to fold suddenly.

- Make sure the open-fold lock is secured (Stroller is completely opened) before use.
- Do not lift the baby stroller with a baby inside by holding the front guard and the handle. It may cause slipping off.
- Do not use on stairs, escalators, uneven floors, sandy and muddy places.
- Stop using if any rift of damage is founded.

Misuse which may cause the baby to fall.

- Always wear the baby belt and buckle up properly.
- Do not let baby stand on the baby seat.
- Do not push from the back of baby seat hardly.

Misuse which may cause the stroller to tip over or the baby to fall

- Use only the basket to keep things and do not hang anything on any parts while baby is in the baby seat.
- Do not seat more than 1 baby or seat on places other than the seat.
- Do not lean on the handle and do not hang on heavy things.

Misuse which may cause the stroller to move suddenly

- Particularly after seating the baby or loading things into the stroller, do not rely too much on the stoppers.
- Do not leave the baby unattended.
- Even when not in use, do not leave the stroller on places like slopes, road side, or other dangerous places etc.

Style of usage

- Weight : less than 10kg
- Reference Age : newborn to 1 year old.


Install the baby seat onto the stroller frame to use.



- Weight : More than 7.5kg and less than 12kg
- Reference Age : 6 months to 2 year old.

Replace the baby seat by the enclosed seat cushion to use.



 Please refer to the baby stroller manual when used as a baby stroller.

For Do Kids 5 buyer

How to attach the baby seat on stroller

- 1 Open the stroller and check if the guard is attached and the brakes are on.



- 2 Place the baby seat on the stroller in backward facing position.

- 3 By holding the handle of the baby seat push the baby seat straight down until hearing a click sound.



- 4 Lift the baby seat slightly to confirm the baby seat is locked.

Release Lever / Lock position



How to release the baby seat from stroller

- 1 Pull the release levers on both side until unlock position.




- 2 By holding the handle move the baby seat upward.



Using the canopy and handle

Handle and canopy can be adjusted to 3 pitches as demonstrated.

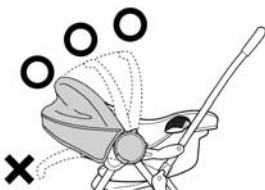


- Do not use when the Handle is not in vertical position.
- Be careful of gaps between pipes and the baby seat when pressing down.
- Do not place the baby seat in forward facing position.


Maintenance

Removing the seat cushion

- 1 By pressing the button of the buckle pull out the shoulder strap cushion and the inner cushion.
- 2 Remove the 2 pads from the inner cushion.

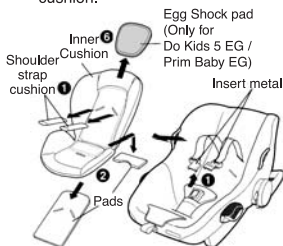

- 3 Remove the cover of the adjustment belt and unhook the adjustment belt.
- 4 Unhook from the side (4 locations) and take out the top of the board.
- 5 Remove the seat cushion and pull out the baby belt and the buckle.
- 6 Remove the Egg Shock pad from the inner cushion or the seat cushion.

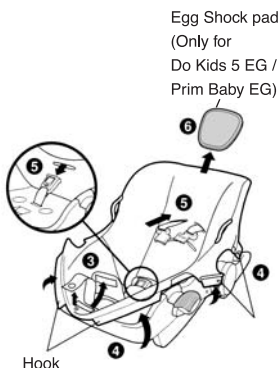

Placing back the seat cushion

- 1 Install the Egg Shock Pad into the inner cushion or the seat cushion
- 2 Hook the top of the board (2 locations).
- 3 Place the seat cushion on seat base and hook back from the side (4 locations)
- 4 Cover the Inner cushion on the baby belt if use the inner cushion.
- 5 Cover the shoulder strap cushion on the baby belt.
- 6 Insert the insert metal into the buckle and pull the adjustable strap by pressing the adjustment button. check if the belts can be adjusted.

Observe the following cleaning conditions

Print to note when washing the seat cushion, shoulder strap cover, protective cushion cover and inner cushion.

	For hand washing, use warm water up to 30°C
	Do not use bleach.
	Do not iron.
	Do not use dry cleaning
	Light squeezing.
	Flat dry at cool place.

※ Remove the pads inside the inner cushion for head and for seat. For Do Kids 5 EG / Prim Baby EG model, remove the Egg Shock pad before washing.

※ Do not use detergent which contains fluorescent brightener.

Maintenance

Maintenance of main body & baby belt

Simply wipe with a piece of wrung wet cloth, or use diluted neutral detergent for cleaning. After cleaning, cool dry the body in shade.



- Do not use undiluted detergent, gasoline or other organic solvents when cleaning. Otherwise it may cause damage to the main body or the baby belt.

Storage

- User guide
Keep in the rear pocket of the backrest after reading.
- Mainbody
When not in use for a period, uninstall it and store in shaded place clear from children.

Product specification

Product Specification Prim Baby S

Size : (W)435 x (D)690 x (H)346mm
(As a chair)
Mass : 3.1kg
Materials : Main bodyPolypropylene
Seat : Surface material Polyester
Cushion material Urethane foam

Product Specification Prim Baby EG

Size : (W)435 x (D)690 x (H)346mm
(As a chair)
Mass : 3.2kg
Materials : Main bodyPolypropylene
Seat : Surface material Polyester
Cushion material Urethane foam